BRABUS carbon fiber spare wheel cover, for W463 - 2019,
order number 464-840-00 & 464-840-10

BRABUS®




Installation manual

The product described in the instructions was developed, produced and checked considering the necessary safety requirements.
In order to ensure a proper and safe function and to rule out danger for persons and objects, this product must be installed appropriately.
Only trained, qualified staff, having the necessary technical experience and tools, should perform the installation.
Therefore you have to read and completely understand these instructions.
Before you start please check the content of the supplied parts as detailed below.

BRABUS scope of delivery:


1x carbon fiber spare wheel cover glossy	464-840-00
oder	
1x carbon fiber spare wheel cover matt	464-850-10

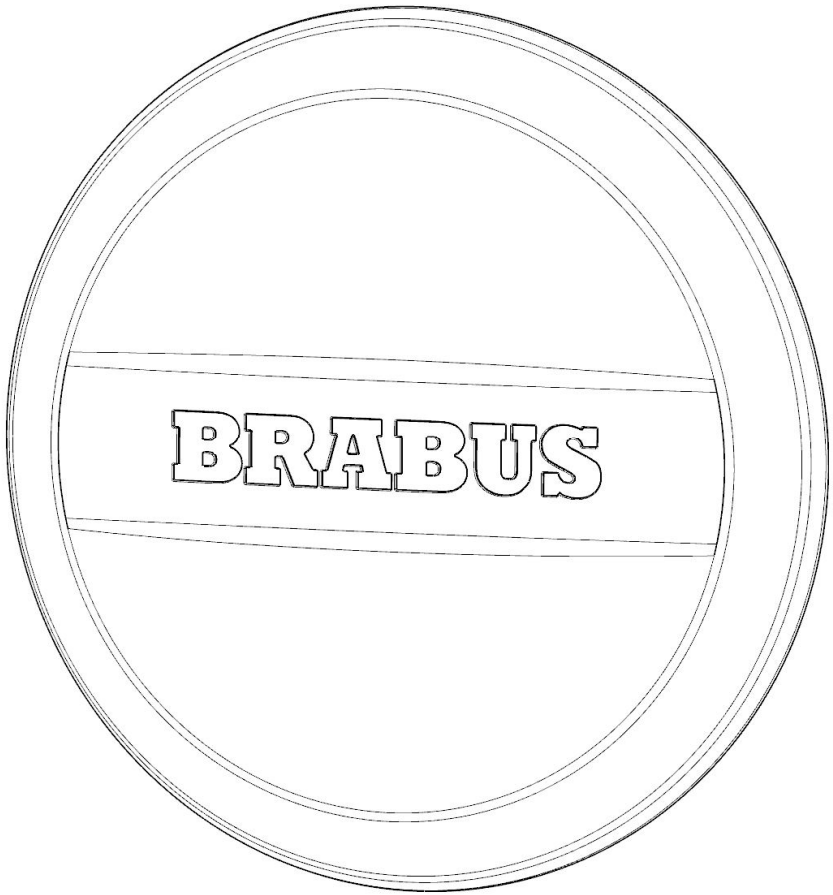

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDA

Disassembly of the original parts:

- The ring that covers the treat rubber of the tire has to be removed by opening the locking clamp on the bottom side.
- The cover of the spare wheel rim has to be pulled off carefully.

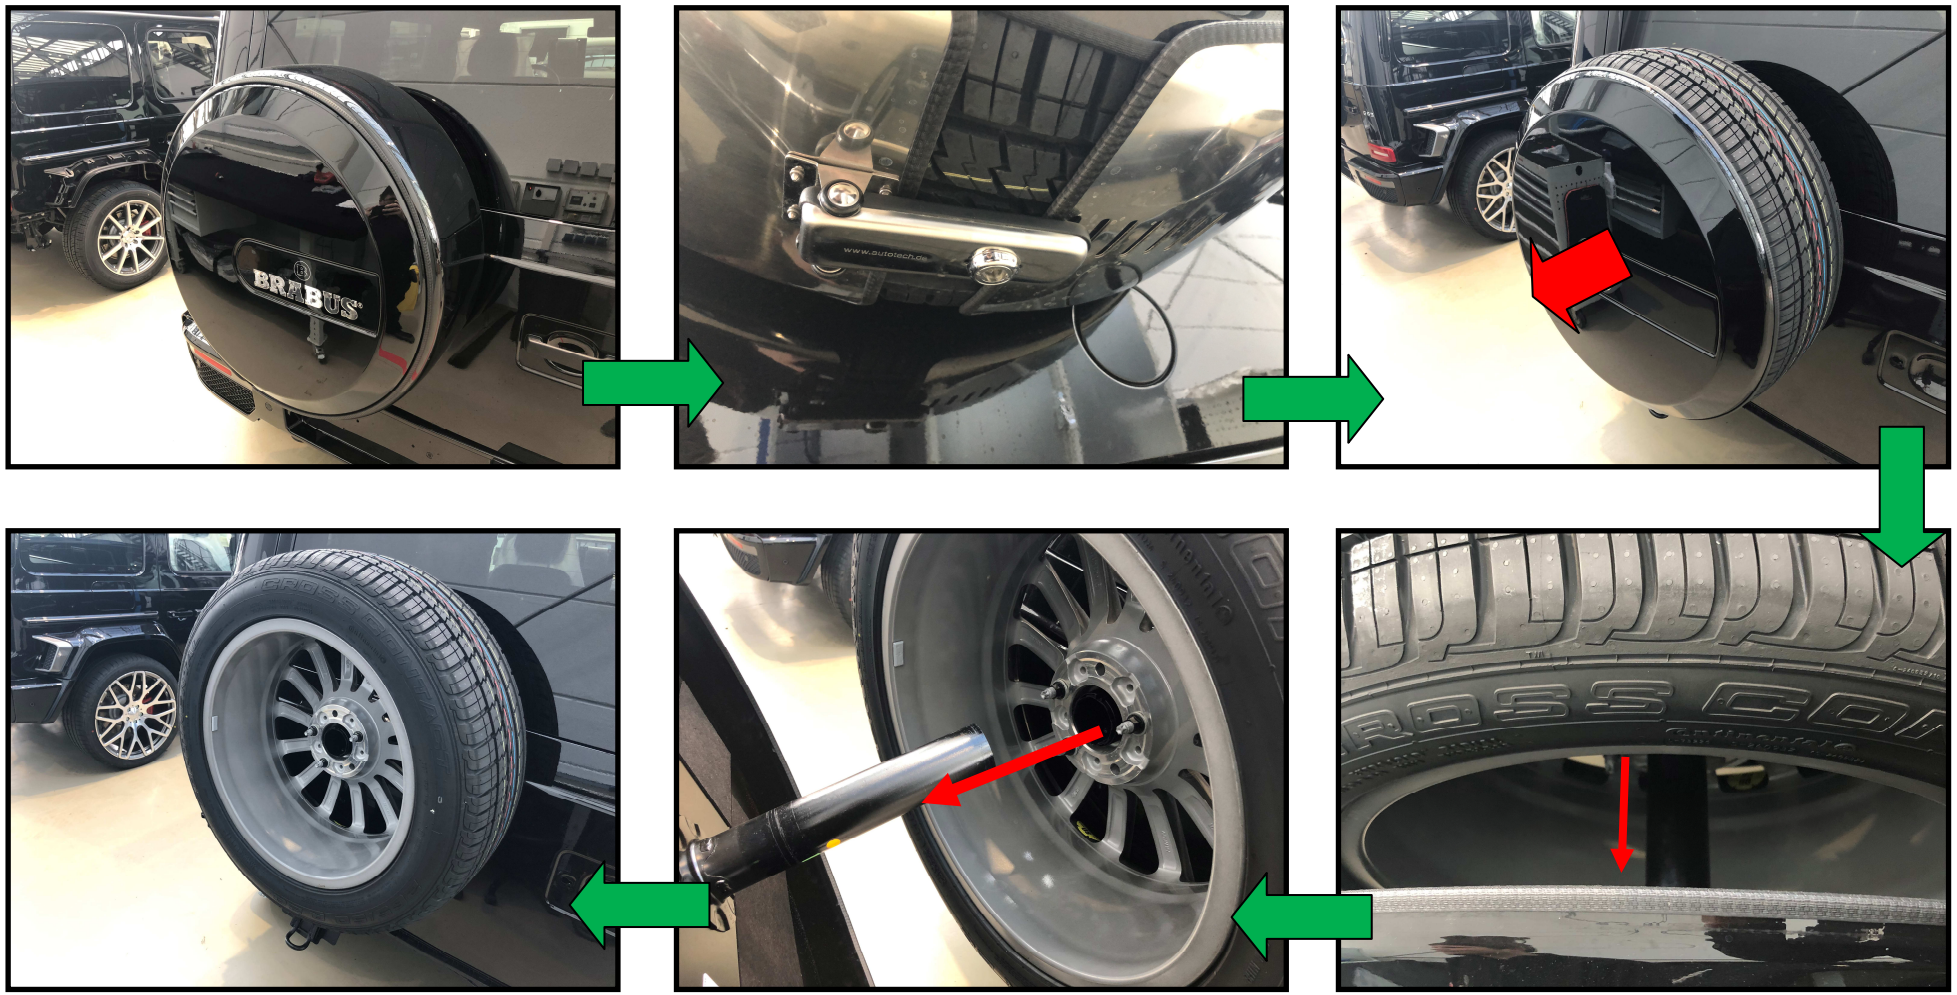


Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDA

Assembly of the BRABUS-carbon fiber spare wheel cover:

- The original part will be replaced by the BRABUS part. The cut in the tube is for positioning. The tube has to fit correctly into the spare wheel carrier.

- The edge protective strip from the original part has to be adopt to the BRABUS carbon fiber spare wheel cover.

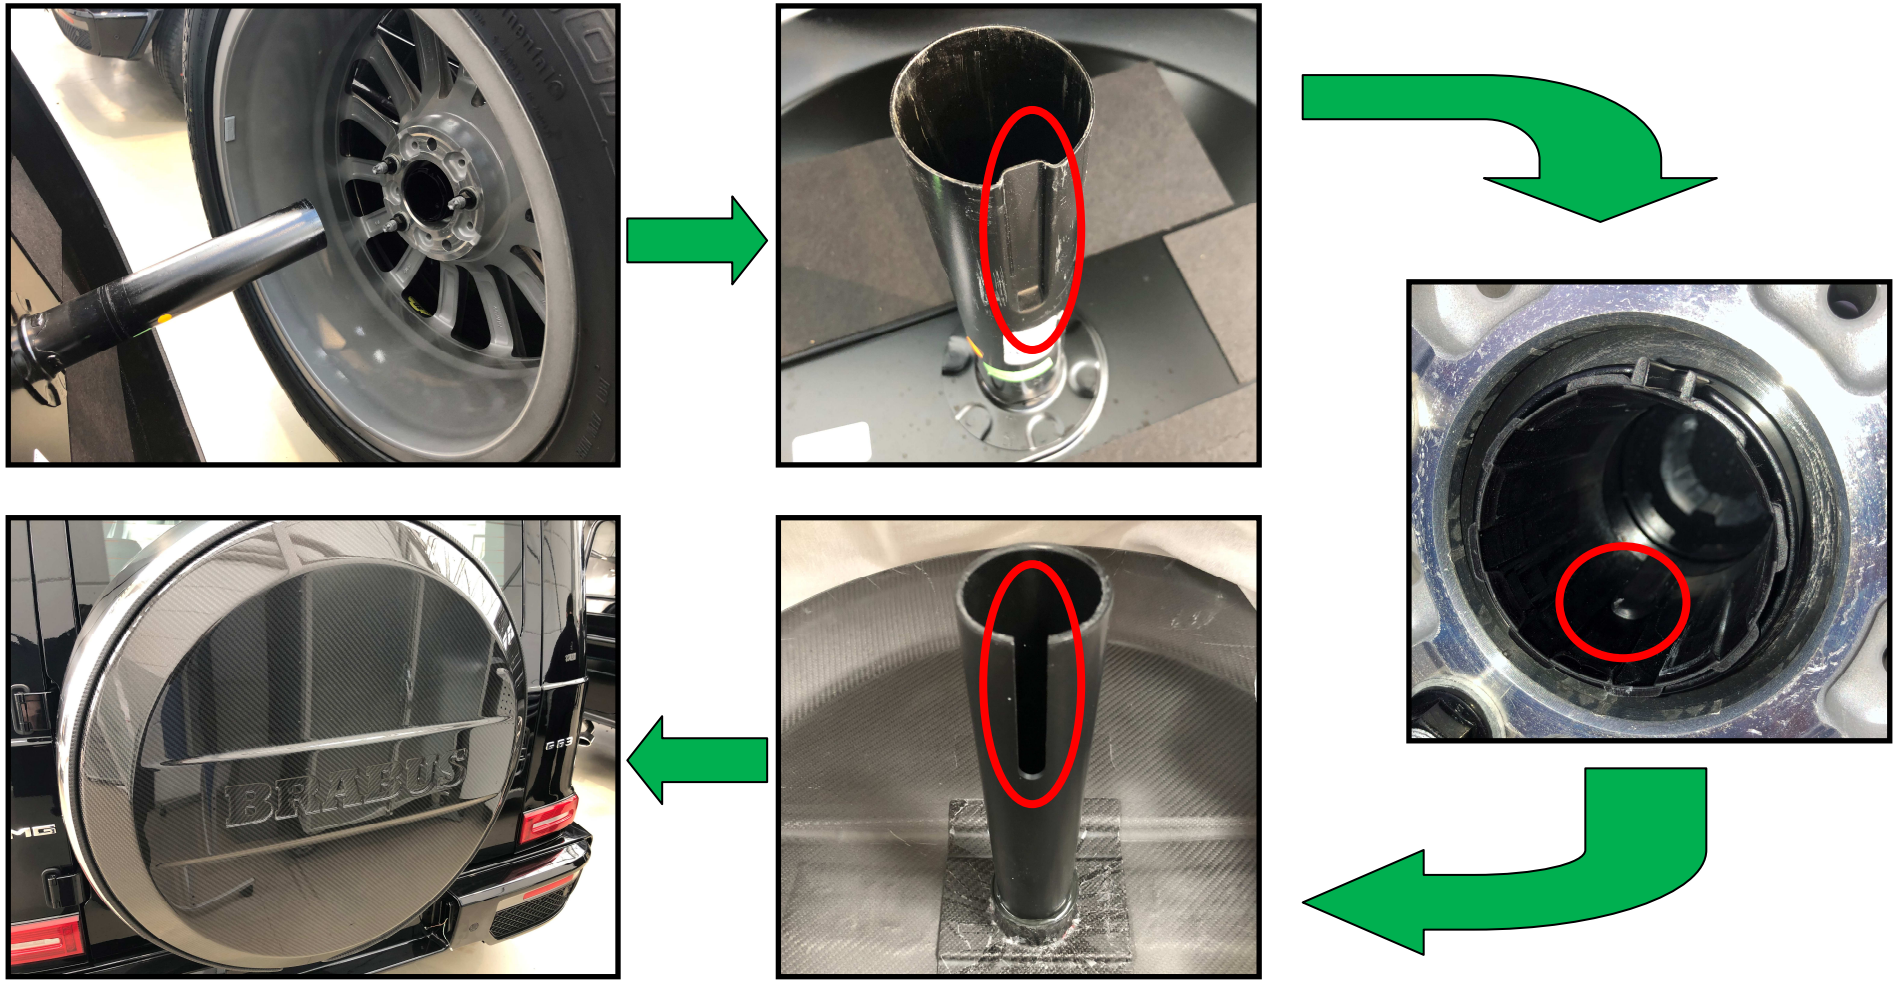

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDA

The ring that covers the treat rubber of the tire has to be remounted on the spare wheel. Before you close the locking clamp please check the correct fitting of the carbon fiber cover and the edge protective strip. The assembly is finished.



Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDA