




*Entrance panels, illuminated for S-Class-Coupé, type C 217
217-350-00*

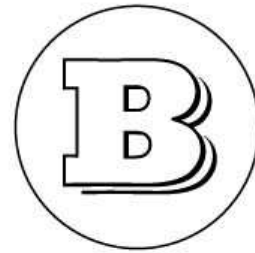

BRABUS®


The product described in the instructions was developed, produced and checked considering the necessary safety requirements. In order to ensure a proper and safe function and to rule out danger for persons and objects, this product must be installed appropriately. Only trained, qualified staff, having the necessary technical experience and tools, should make the installation. Therefore you have to read and completely understand these instructions. Check the content of the parts supplied prior to installation.

Included in delivery of illuminated entrance panels:

1 x Set of entrance panels, illuminated	217-350-00-B	1 x Screw M4x10	0600410
1 x Wiring loom	222-350-13	1 x Screw M4x20	0600420
2 x Adapter resistor	222-350-10	1 x Screw M4	03944
1 x Control unit for entrance panels	222-352-10	1 x Adhesive tape	
1 x Control unit bracket	222-354-00		
1 x Fixation plug for bracket	A 000 988 1128		


Preparation:

Remove the left and the lower left and right dashboard covers and the standard entrance panels.

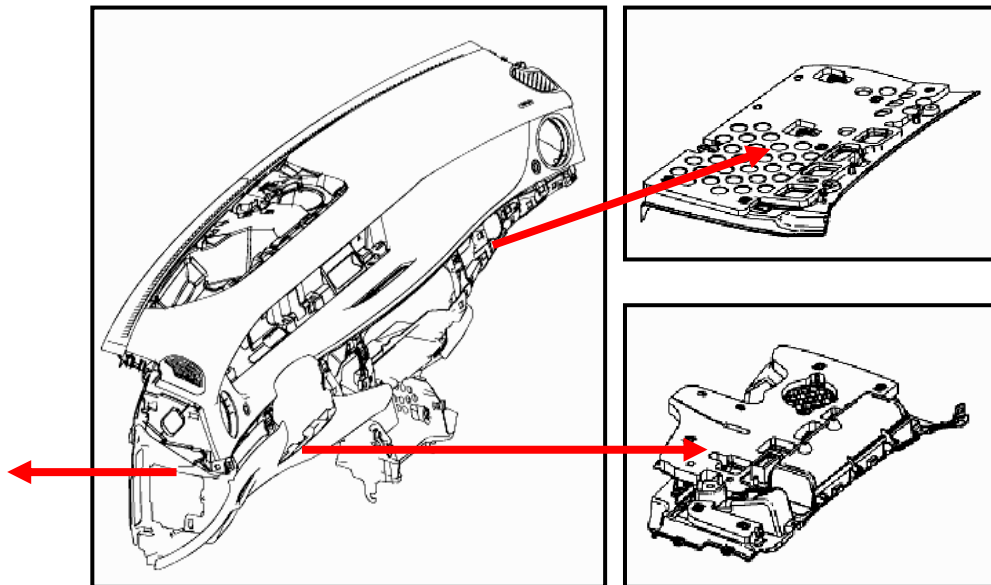


i Attention !

At cars which are equipped with illuminated entrance panels from the factory the resistors/ adapters (222-350-10) supplied must be connected to the plugs of the standard entrance panels!

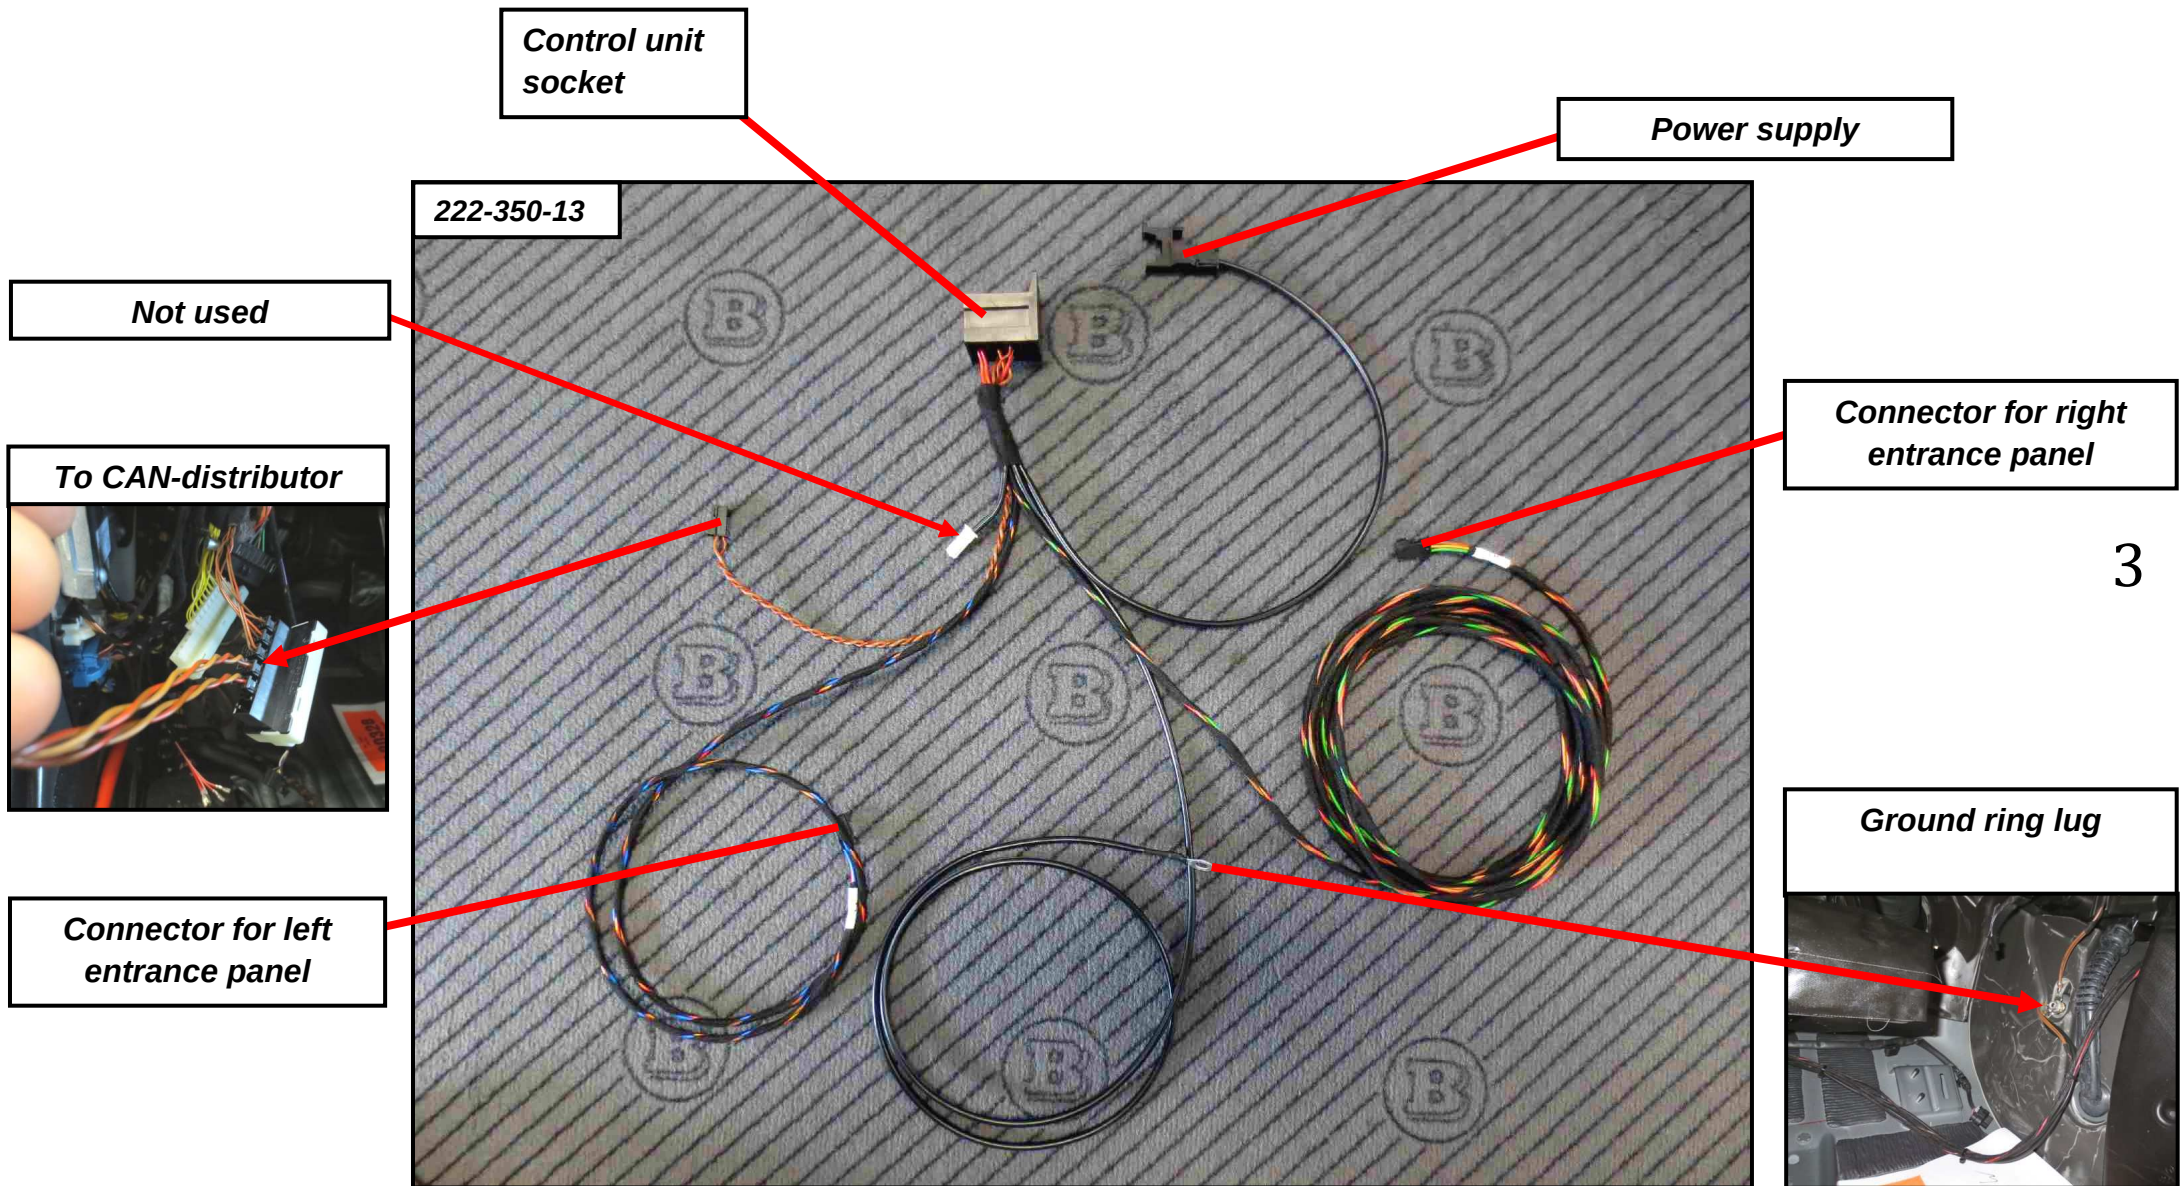

1. Remove the standard lower entrance panels. Attach the control unit bracket using assembly material supplied according to fig. 2. Re-locate the antenna according to image and fixate it using adhesive tape supplied.
2. Attach the fuse bracket of the Brabus wiring loom to slot 211 of the left Fuse- and relay module K40/6.

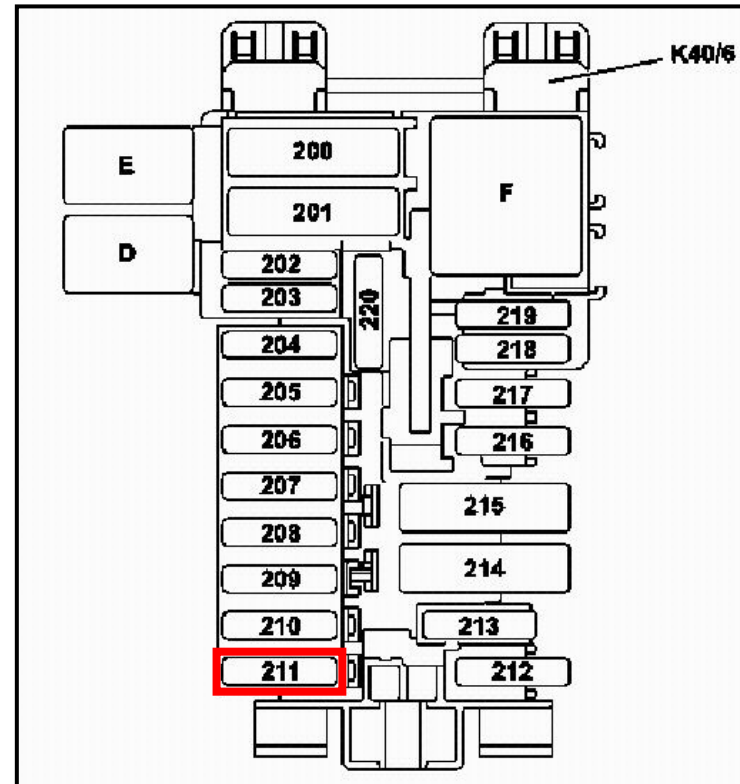

3. Fixate the control unit bracket and the control unit socket at position shown (left side) using screws supplied.
4. Attach the control unit to the socket.




5. Attach the CAN plug of the Brabus wiring loom to the CAN distributor shown (wire colours brown/ brown-black).



6. Bolt the ground ring lug to the ground terminal shown (nowhere else!) on the left side.



7. Route the shorter wire to the driver side, route the longer wire to the passenger side (behind center console, behind lower a-pillar trims). Fixate the wiring harness to standard wirings using cable ties.

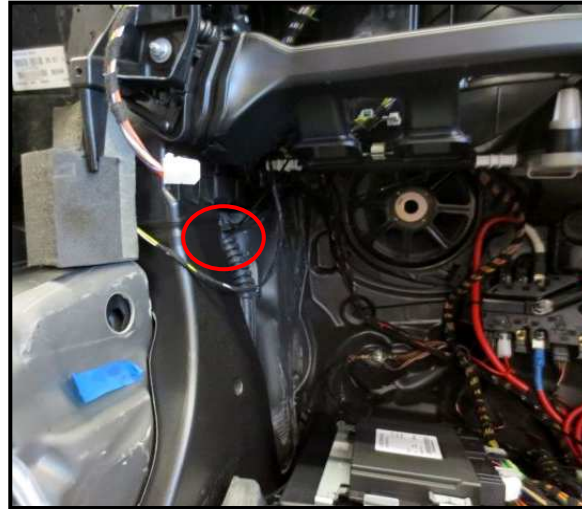

7

8. Clean and degrease the entrance areas using appropriate cleaning fluid (e.g. Würth, article-no. WU893460).
9. Remove the protection foil of the adhesive stripes on back of the entrance panels.



10. Bond the entrance panels to the assembly areas of the standard entrance panel areas according to fig. below (aligning to upper standard entrance panels).



8

 Attention!

Once pressed to the assembly areas the entrance panels cannot be aligned anymore, therefore take care for proper alignment.

11. Route the wires of the entrance panels into the car (below door sealing).
12. Connect the wires of the entrance panels to the main wiring harness.
13. Attach the flat fuse (5Amps) supplied to the fuse slot.
14. Perform a function-check.