
BRABUS

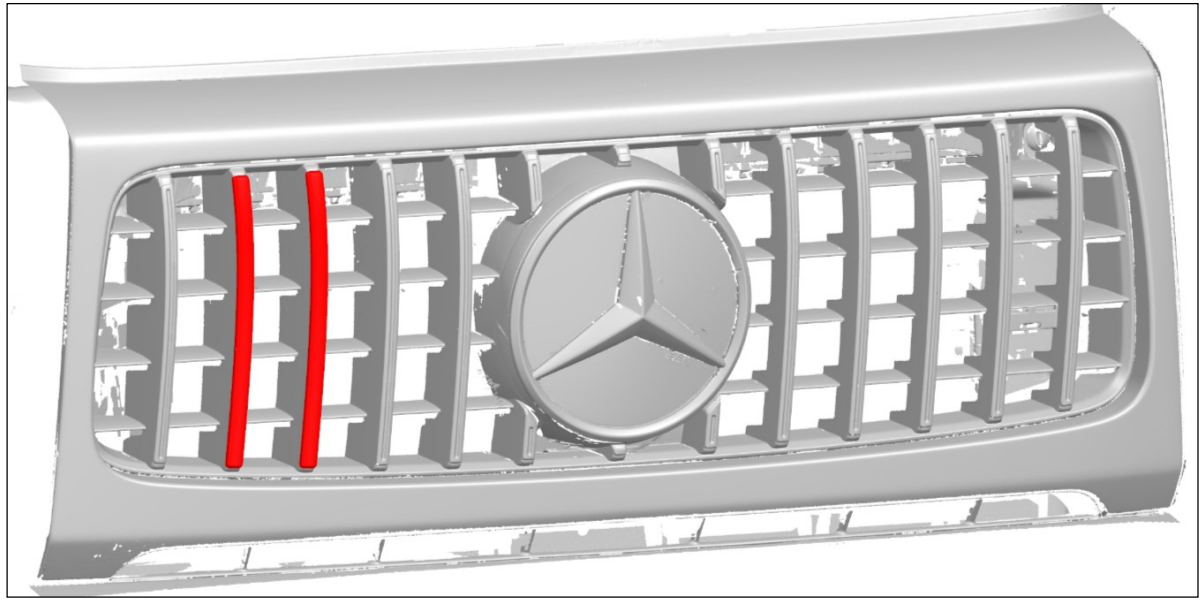

The product described in the instructions has been developed, manufactured and subjected to checks in compliance with the necessary safety requirements. In order to ensure proper and safe functioning and to exclude hazards to persons and property, this product must be installed properly. Therefore, installation may only be carried out by trained specialist personnel who have the required vehicle-specific technical and specialist knowledge and the necessary tools for installation. To do this, you must have carefully read and understood the installation instructions.

Check the completeness of the components included in the scope of delivery before starting work.

Notes for bonding

The components can be bonded with the supplied adhesive or with PU windshield adhesive in combination with an appropriate primer.

All adhesive surfaces, both those on the vehicle and those on the attachment, must be carefully cleaned and degreased.

We recommend using window adhesive (e.g., Würth, window adhesive "Classic" or "Pro", item no.: WU89002310, WU89002330) in conjunction with acetone (e.g. Würth, item no.: WU893460) and primer (e.g. Würth, item no.: WU890024101).

After cleaning with acetone, the primer is applied to the adhesive surfaces on the vehicle and on the component using appropriate primer brushes (e.g., Würth, Art. No.: WU891650) (apply in one direction only, then allow to flash off!).

Apply an even bead of adhesive to the adhesive edge and bond the part to the vehicle.
To remove excess adhesive, we recommend, for example, K+D Cleaner (e.g., Würth, Art. No.: WU89010063).

To hold the components in place until the adhesive has cured, we recommend using clamping suction cups (e.g. Würth, Art. No.: WU069155210).




It should be noted that you do not treat the bonding surfaces with primer in the area that can still be seen after bonding the corresponding part! Apply primer only up to a distance of approx. 5mm from the marking!

Observe the bonding instructions, always ensure that all bonding surfaces are clean and free of grease before bonding! Free the bonding surfaces from paint mist before bonding!

Official technology-partners Continental MOTUL YOKOHAMA ADVAN HANKOOK Member of VDAT


Included in delivery BRABUS:

1x Signature Stripes Set 465-299-00

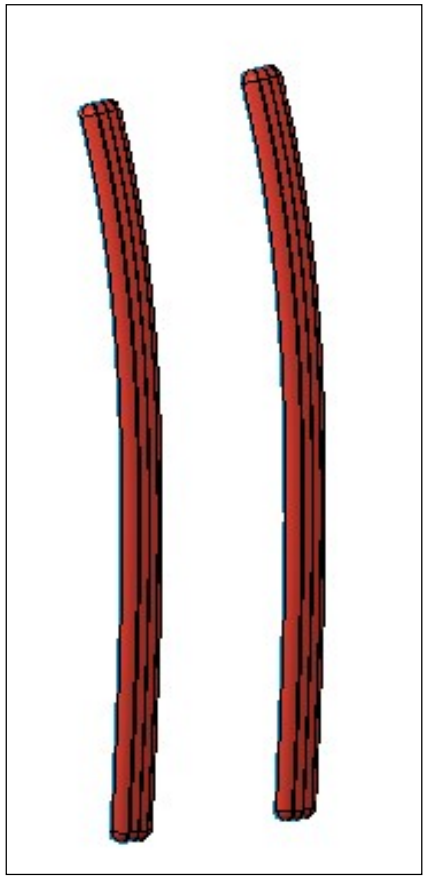


Official technology-partners Continental MOTUL YOKOHAMA ADVAN HANKOOK Member of VDN


- Hold the BRABUS Signature Stripes against the front grille trim and, after aligning, mark the position of the stripes on the front grille trim with a washable marker.
- Prepare the adhesive surfaces on the BRABUS Signature Stripes (see red marking) for bonding in accordance with the bonding instructions.
- Apply even beads of adhesive to the adhesive surfaces of the Signature Stripes.

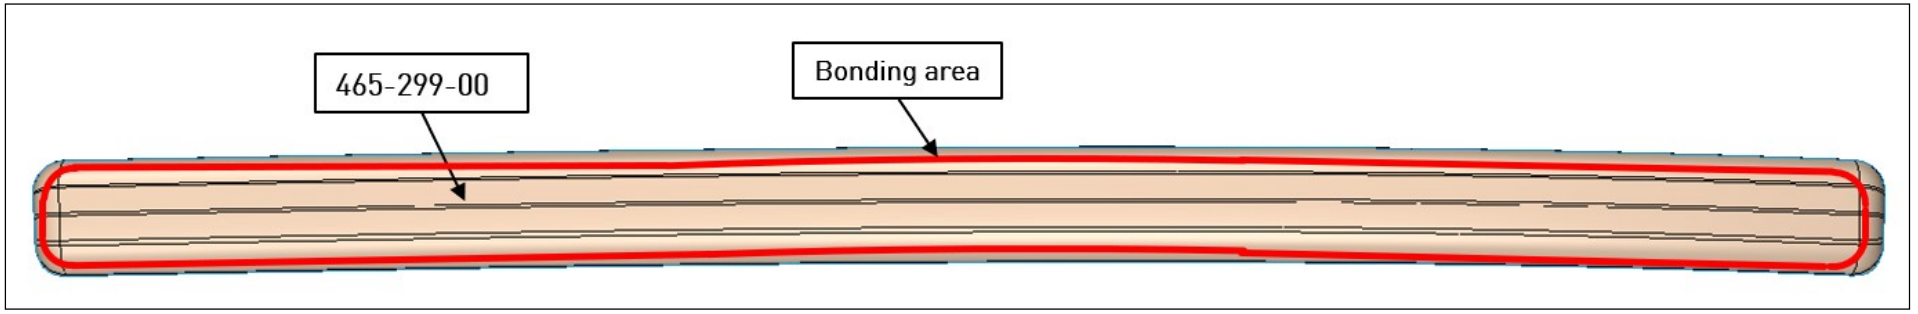

- Glue the strips flush to the front grille cladding at the marked points, remove excess adhesive immediately!
- Fix the Signature Stripes in place until the adhesive has finally hardened using suitable means (suction cups, adhesive tape, etc.).
- Avoid visiting an automatic car wash within 24 hours of application.

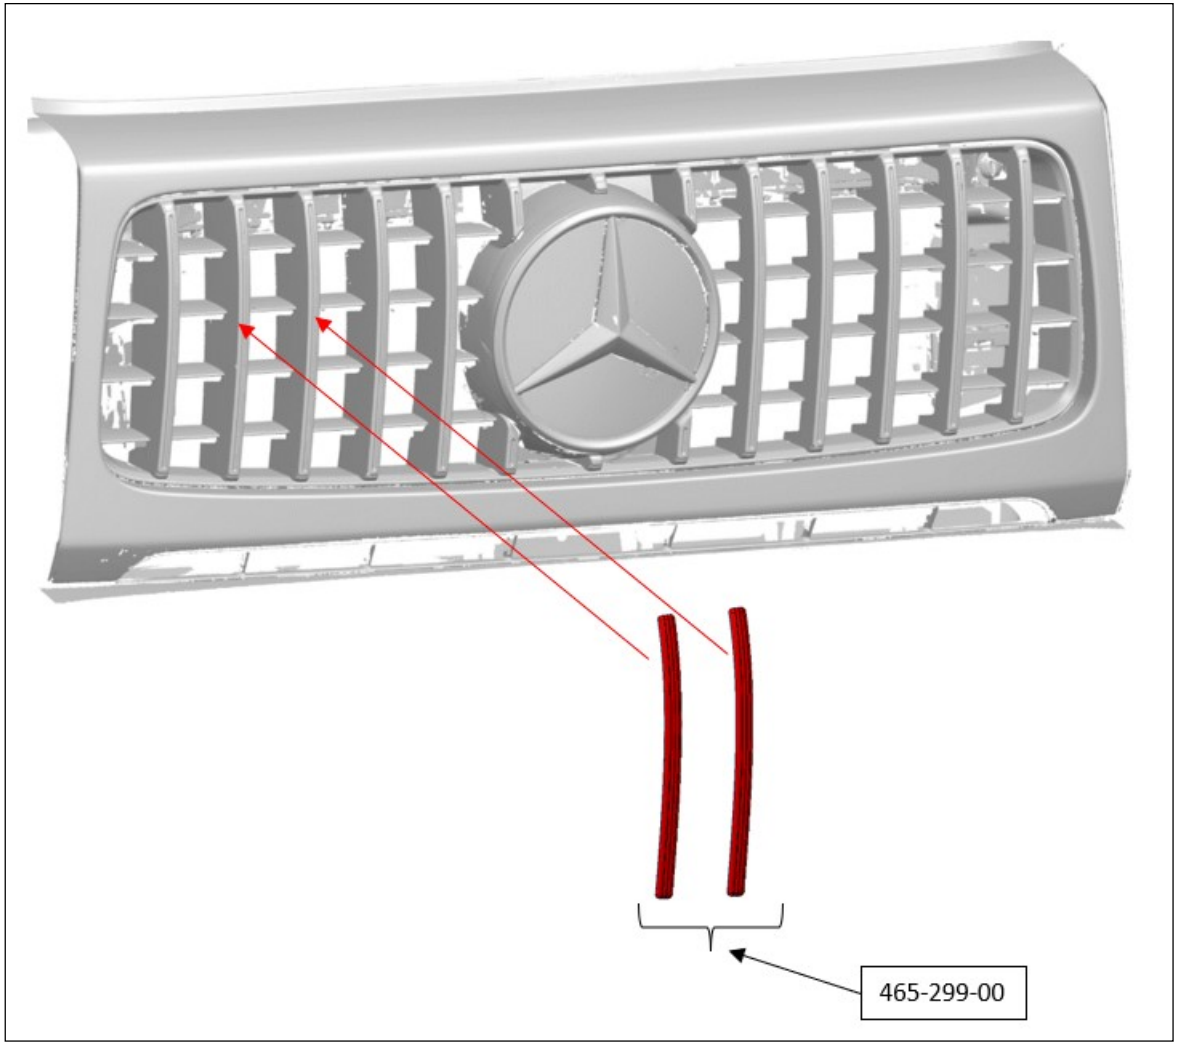

Official technology-partners Continental MOTUL YOKOHAMA ADVAN HANKOOK Member of VDN

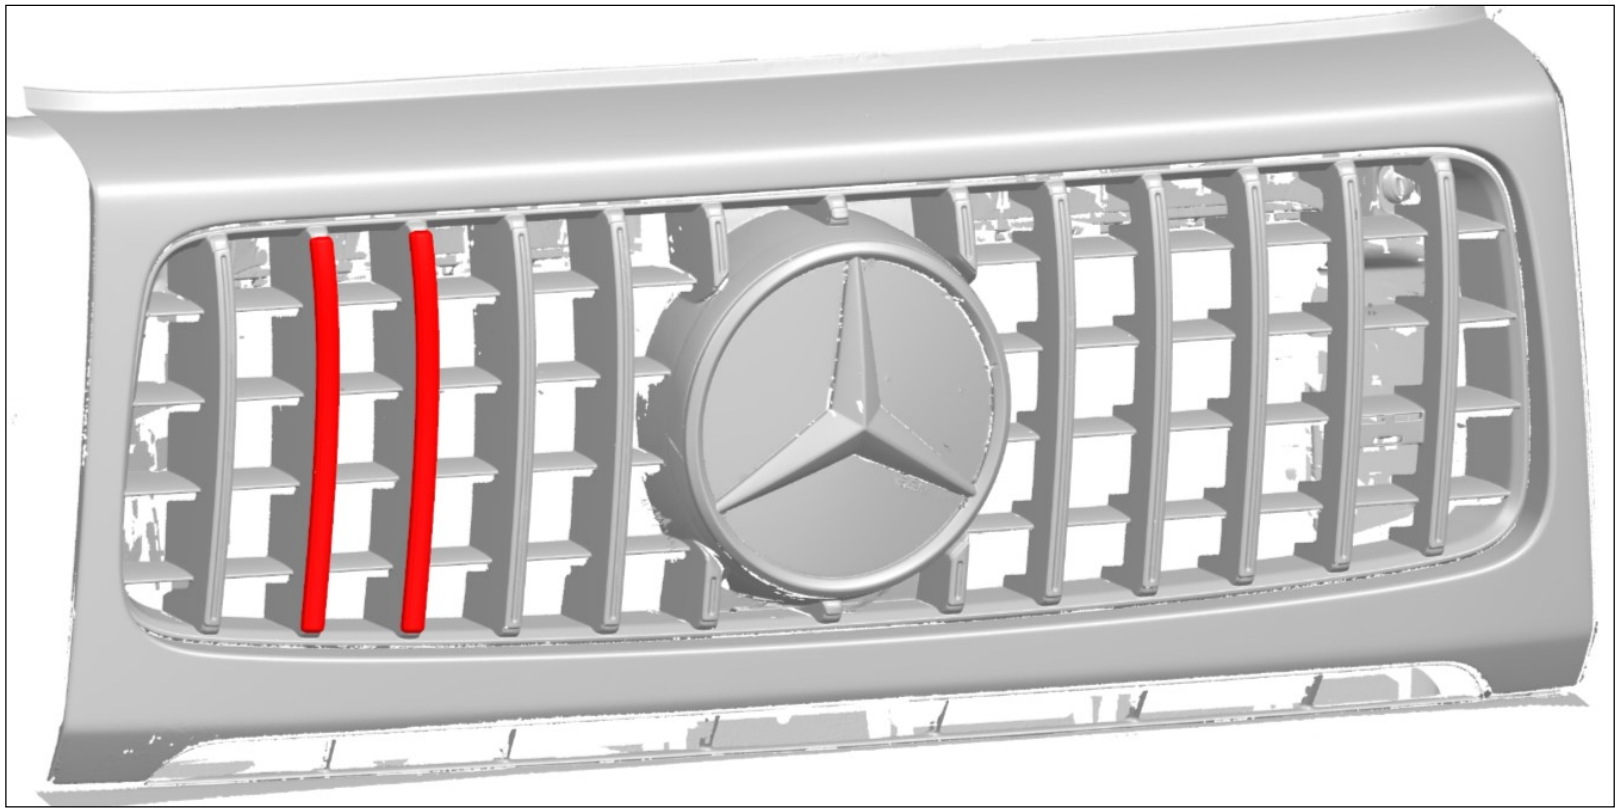

High Performance BRABUS Automobiles

Official technology-partners Continental MOTUL YOKOHAMA ADVAN HANKOOK Member of VDAT