




222-463-00_10

Carbon-fibre rear diffuser for type 222-S63 AMG

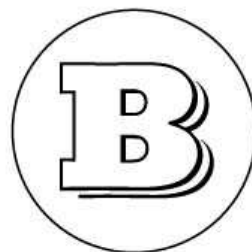


BRABUS®

The product described in the instructions was developed, produced and checked considering the necessary safety requirements. In order to ensure a proper and safe function and to rule out danger for persons and objects, this product must be installed appropriately. Only trained, qualified staff, having the necessary technical experience and tools, should make the installation. Therefore you have to read and completely understand these instructions.

Included in delivery:


1x Carbon-fibre rear diffuser, matte or glossy 222-463-01

1x Assembly kit, consisting of screws/ brackets/ speedfixes

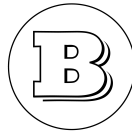

Assembly:

- Remove the rearbumper and the standard rearbumper insert according to Mercedes-Benz workshop instructions.

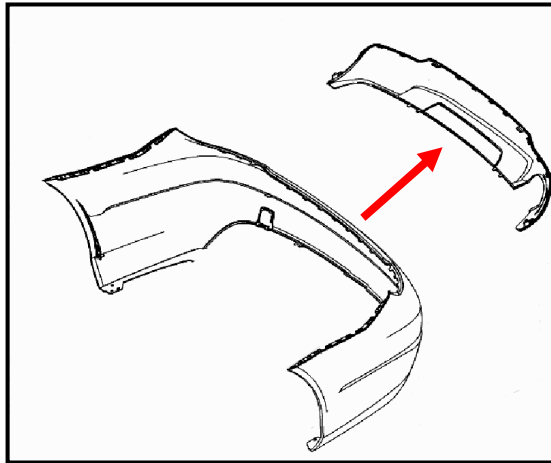


- Attach the Brabus carbon fibre rear diffusor to the assembly areas of the standard part.






- Bolt the fog lamps to the carbon fibre rear diffusor.

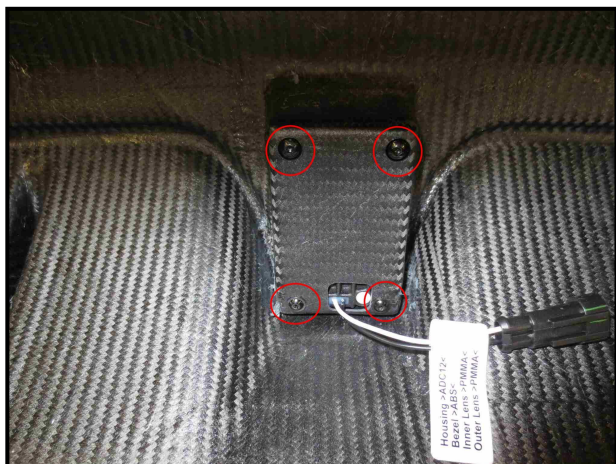


- Secure the rear diffusor using speedfix-brackets supplied according to images (shorten grounding clips, if necessary), attach the standard reflectors to the left and right notch.


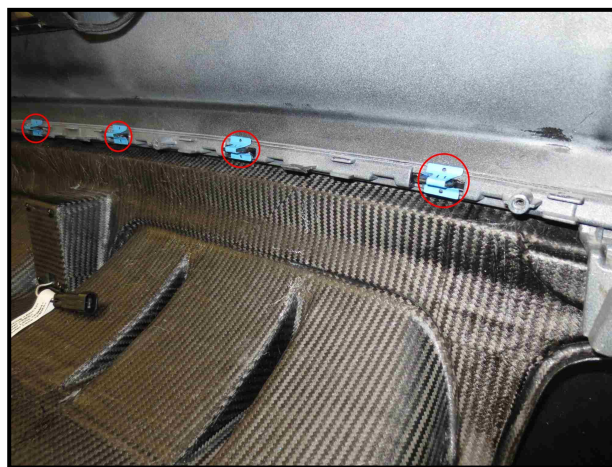




- Take the standard frog lamp out of the plastic insert of the standard rearbumper insert and cut the plastic insert according to images (red marks).

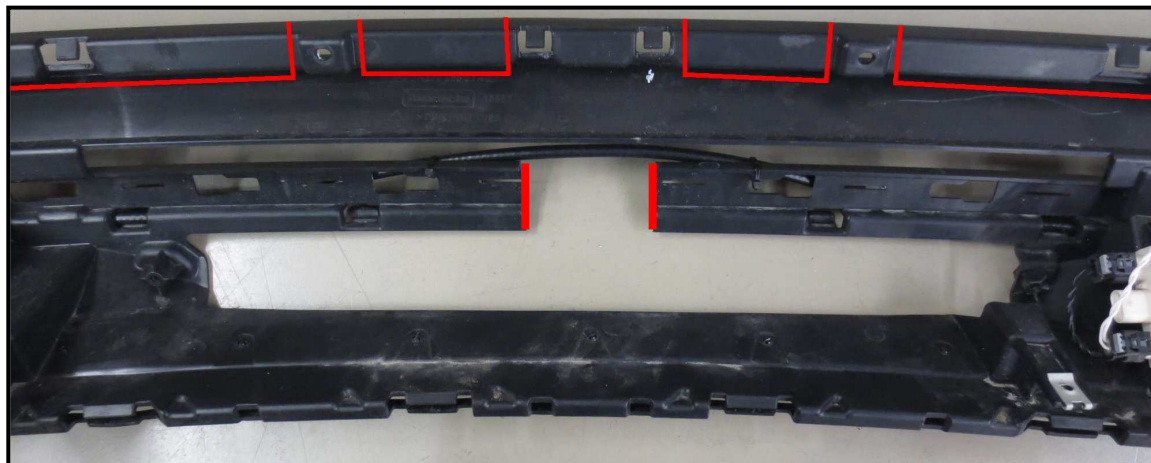

- Hold the inlay to the rear diffusor according to images and bond the alloy brackets to it using adhesive supplied (65mm away from edge).

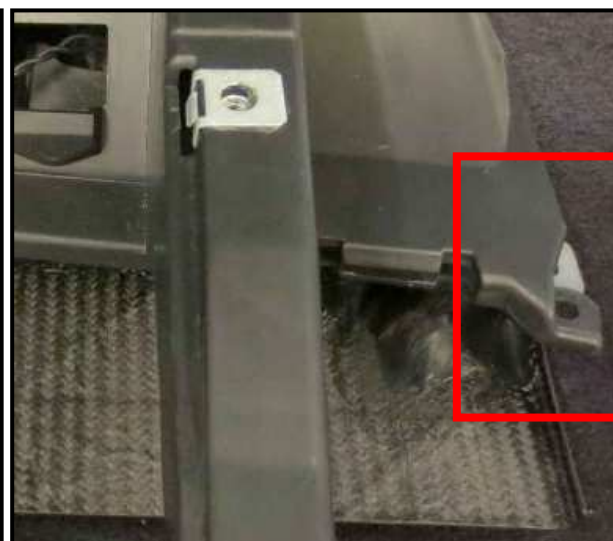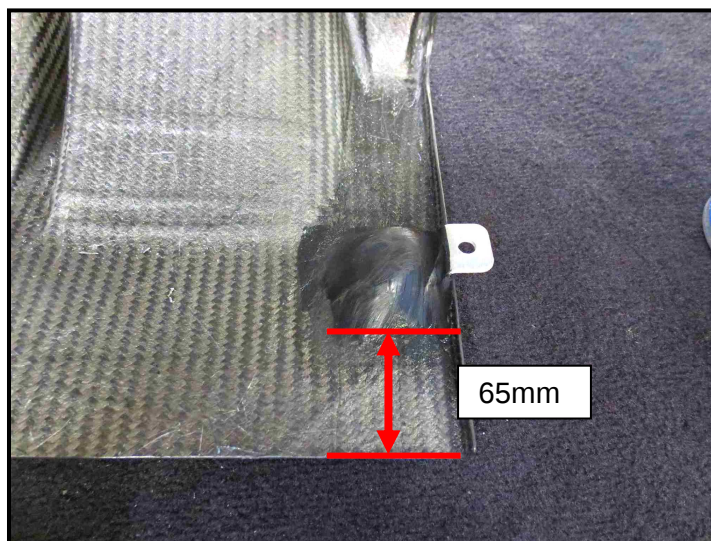



- Bolt the plastic insert to the rearbumper. Connect the wiring harness to the fog lamp and route the antenna of the bootlid-opener above the fog lamp.



5

- Re-attach the completed rearbumper.
- Bolt the lower areas of the rear diffuser to the car.

