

Assembly kit for stainless steel sports exhaust f W/ S 205
205-674-90

BRABUS®

The product described in the instructions was developed, produced and checked considering the necessary safety requirements.
In order to ensure a proper and safe function and to rule out danger for persons and objects, this product must be installed appropriately.
Only trained, qualified staff, having the necessary technical experience and tools, should perform the installation. Therefore you have to read and completely understand these instructions. Check the content of the supplied parts as detailed next page prior to assembly.

Included in delivery:

Quantity:	**Description**:	**Part-no.:**
1x	Shielding for rear silencer, inside	A 205 680 04 22
1x	Shielding for rear silencer, outside	A 205 680 02 22
1x	Rear silencer bracket	A 205 490 26 40
2x	Hexalobular bolt for rear silencer bracket	N 000000 00 70 13
2x	Bolt for shielding	N 000000 00 14 57
3x	Hexagon nut with collar	A 004 990 00 50


Assembly:

- Lift the car on a suitable platform at the Mercedes-Benz prescribed lifting positions with due regard to valid MB safety guidelines.
- Remove the right side underbody trim shown.



Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDA

- Remove the threaded plugs shown.

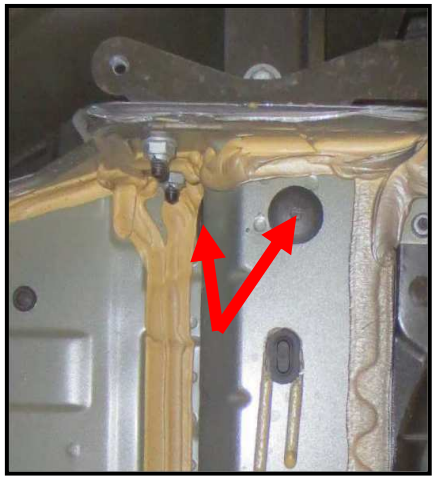





- Bolt the exhaust bracket supplied to the car underbody using hexalobular bolts supplied.




- Bolt the inner shielding to the outer shielding using bolts supplied.

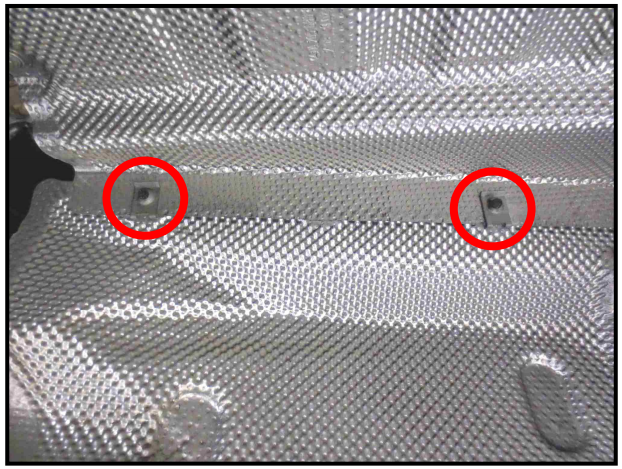


- Bolt the completed shielding to the car underbody using bolts and hexagon nuts supplied.

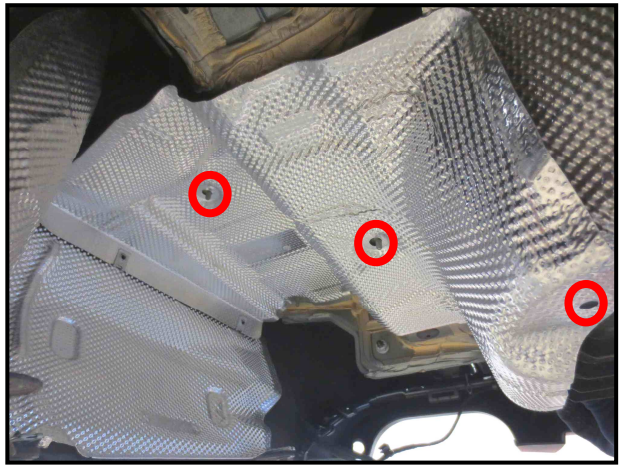

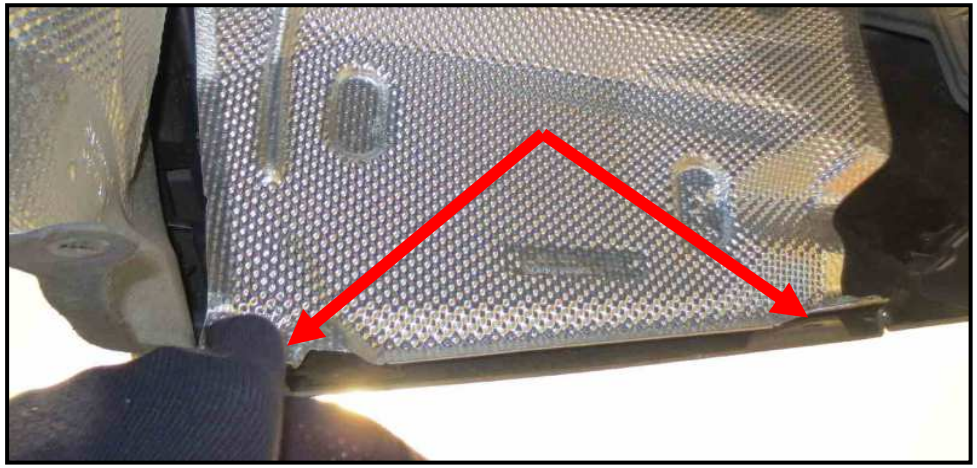

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDA

- Remove the inner exhaust rubber on the left side and attach it to the right side exhaust bracket.

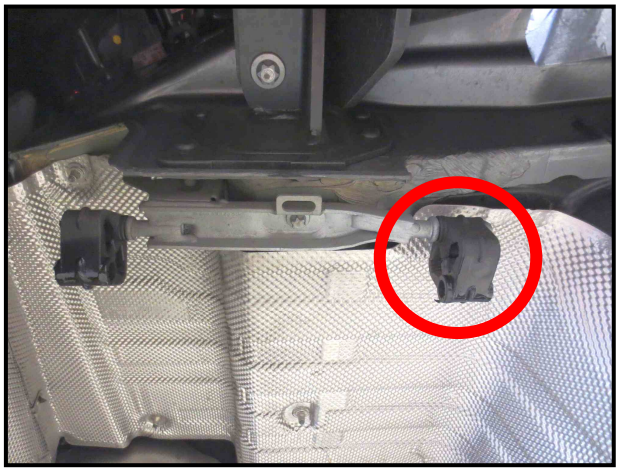

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDA