




BRABUS®

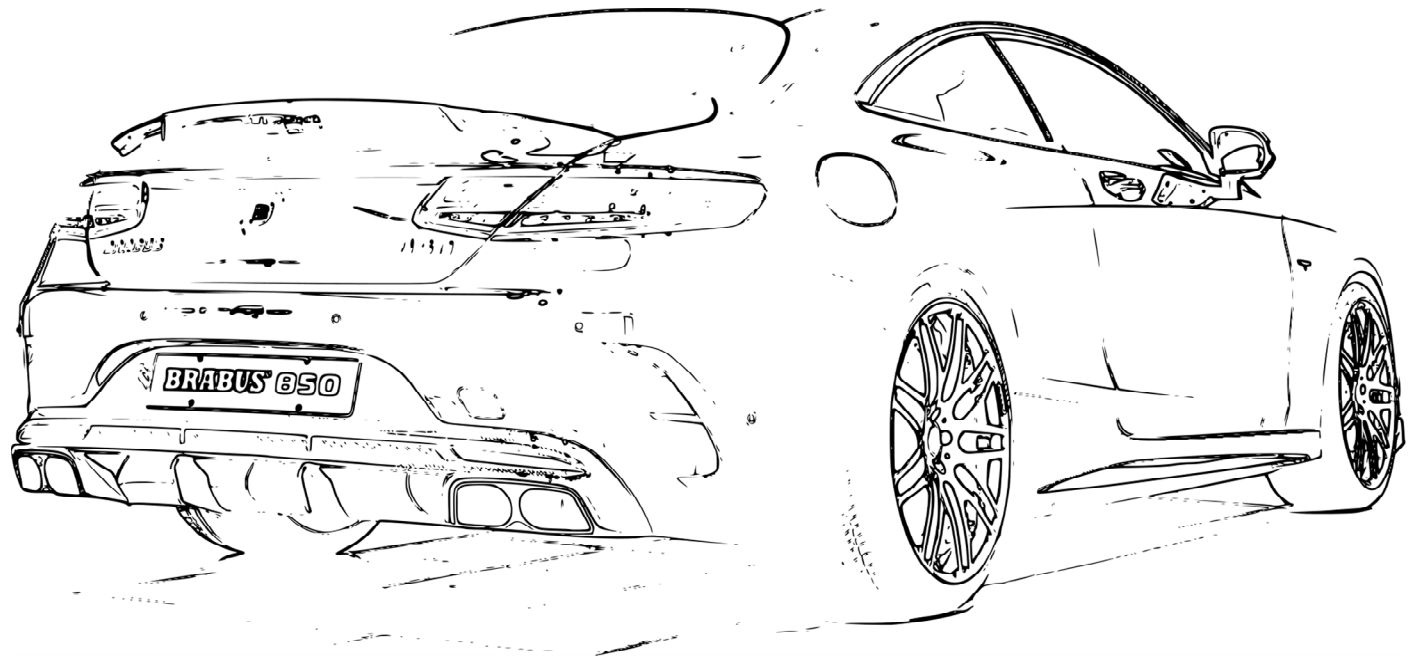

*The product described in the instructions was developed, produced and checked considering the necessary safety requirements.
In order to ensure a proper and safe function and to rule out danger for persons and objects, this product must be installed appropriately.
Only trained, qualified staff, having the necessary technical experience and tools, should perform the installation.
Therefore you have to read and completely understand these instructions.
Check the exact fitment of the part supplied prior to painting.*

Hints for adherence of body parts

The add on-parts for the car body can be bonded using the delivered adhesive, or using PU window adhesive in connection with appropriate primer .

When using the delivered adhesive all bonding areas (those of the car body and those of the add on parts) have to be sanded and properly cleaned and degreased.

We recommend to use Würth window-adhesive (e.g. Würth, window adhesive „Classic“ or „Pro“, article-nos.: WU89002310, WU89002330), in connection with acetone cleaner (e.g. Würth, article-no.: WU893460) and primer (e.g. Würth, article-No.: WU890024101).

The primer gets attached to the bonding areas of the car body and the add on parts by using special primer brushes (e.g. Würth, article-no.: WU891650). Attach the primer only in one direction. After the primer has flashed off, apply an even line of adhesive and bond the part to the car. Remove excessive adhesive using suitable cleaner (e.g. Würth, article-no.: WU89010063).

For fixation of the parts until the adhesive is completely hardened,
we recommend to use assembly brackets, (e.g. Würth, article-no.: WU069155210 )

2

Remove paint fog prior to painting!

Take care not to apply the primer to areas which are still visible after bonding, apply up to 5mm away from the markings!

Regard to bonding hints and make sure the bonding areas are clean, free of grease and free of paint.


Included in delivery:

1x Carbon fibre bootlid spoiler 217-460-01

1x Adhesive kit B28/000-8

Assembly of bootlid spoiler:

- Hold the bootlid spoiler to the designated area of the bootlid.
Align it and mark the outer edges of the spoiler to the bootlid using a washable marker.

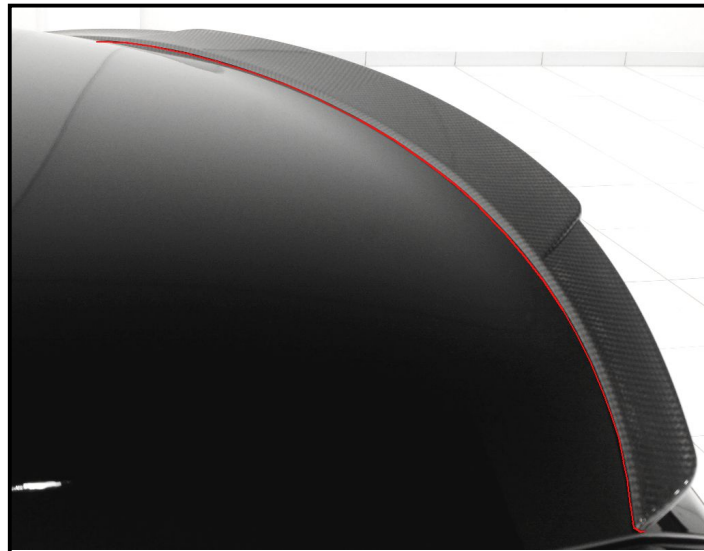

- Prepare the bonding edges of the bootlid spoiler and those of the bootlid according to bonding hints on page 2.
- Apply even lines of adhesive to the carbon fibre bootlid spoiler.
- Attach the spoiler to the bootlid according to previously made marks, fix it using strong adhesive tape until the adhesive is finally hardened. Remove excessive adhesive immediately!
- Avoid to wash the vehicle inside an automatic washing bay within 24hours after bonding!