


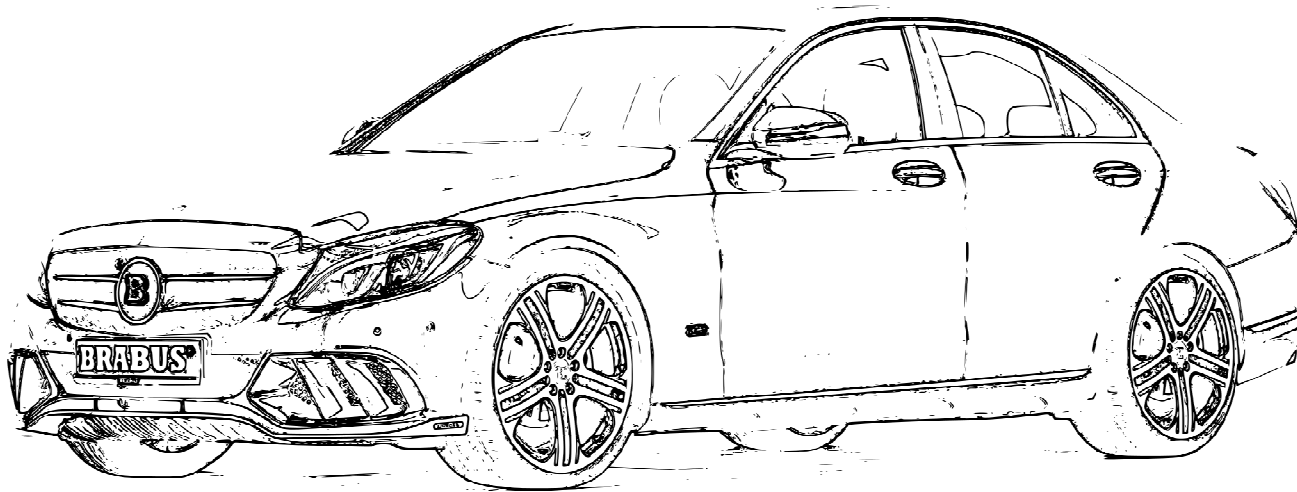

BRABUS®



The product described in the instructions was developed, produced and checked considering the necessary safety requirements. In order to ensure a proper and safe function and to rule out danger for persons and objects, this product must be installed appropriately. Only trained, qualified staff, having the necessary technical experience and tools, should make the installation. Therefore you have to read and completely understand these instructions.

Included in delivery:

1x Bootlid-spoiler 205-450-00

1x EC type approval

Assembly:

- Hold the bootlid-spoiler to the bootlid.



- Align the bootlid-spoiler until it fits flush and mark the outer edges to the bootlid using a washable marker.



3

- Clean and degrease the bonding area of the bootlid using acetone cleaner (e.g. Würth, no. 089 34 60).
- Remove the protection foil of the adhesive tape on the back of the spoiler and bond the spoiler to the bootlid according to the markings. Please be advised that the position cannot be re-adjusted due to the powerful adhesive tape. Firmly press the spoiler to the bootlid.