Brabus-bootlidspoiler for Mercedes-Benz GLS, type X167
Article-no. X167-450-00

BRABUS®



The product described in the instructions was developed, produced and checked considering the necessary safety requirements.
In order to ensure a proper and safe function and to rule out danger for persons and objects, this product must be installed appropriately.
Only trained, qualified staff, having the necessary technical experience and tools, should perform the installation.
Therefore you have to read and completely understand these instructions.
Check the content of the parts supplied prior to delivery.


Included in delivery:

1x Bootlidspoiler X167-450-01

- Hold the Brabus bootlidspoiler to the vehicle bootlid according to image below in order to find the correct position.



- Align the bootlidspoiler and mark the outer edges to the bootlid using a washable marker.
- Clean the bonding surface (e.g. with acetone cleaner, Würth no. 089 34 60, or silicone remover)
- We recommend a second person for assembly!
- Remove the red protective foil of the adhesive tapes.

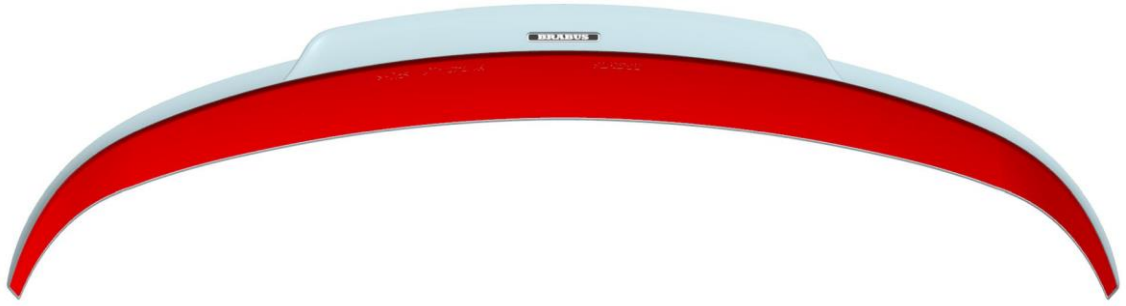

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDAT

- Attention! The adhesive is very strong! Corrections can only be made, as long as the adhesive tape has yet not touched the bootlid.
- Attach the spoiler according to the marked outline.
- Firmly press the spoiler to the boot lid.

Hint:

The adhesive tape finally hardens within 24 hours after bonding. Do not wash the vehicle within this time!

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDA