Frontschutzbügel for W465,
Partnumber: 465-800-FSB/US/SW

BRABUS



The product described in the instructions was developed, produced and checked considering the necessary safety requirements.
In order to ensure a proper and safe function and to rule out danger for persons and objects, this product must be installed appropriately.
Only trained, qualified staff, having the necessary technical experience and tools, should perform the installation.
Therefore you have to read and completely understand these instructions.

Scope of delivery BRABUS front bar, for vehicles without standard front bar,
Article-no 465-800-FSB:

1x	Widestar Front bull bar G465	12257
1x	Widestar front bar mounting kit 465	12244
1x	Center insert for bull bar	465-234-202-FSB

Scope of delivery BRABUS front bar, for vehicles with standard front bar and or US vehicles,
Article-no 465-800-FSB-US:

1x	Widestar Front bull bar G465	12257
1x	Front bar support kit Widestar 465 Standard bar	12229
1x	Center insert for bull bar	465-234-202-FSB

Scope of delivery BRABUS front bar, for vehicles including cable winch,
Article-no 465-800-FSB-SW:

1x	Widestar Front bull bar G465	12257
1x	Widestar front bar mounting kit 465 Winch	12236
1x	Center insert for bull bar incl. cable winch	465-234-202-FSB-SW


Official technology-partners Continental MOTUL YOKOHAMA ADVAN HANKOOK Member of VDN

- Dismantle the front apron of the vehicle.




Official technology-partners Continental MOTUL YOKOHAMA ADVAN HANKOOK Member of VDN

- Install the M10 insertion threads (4x) on the front cross member using suitable insertion pliers (not required for vehicles with a standard front bar

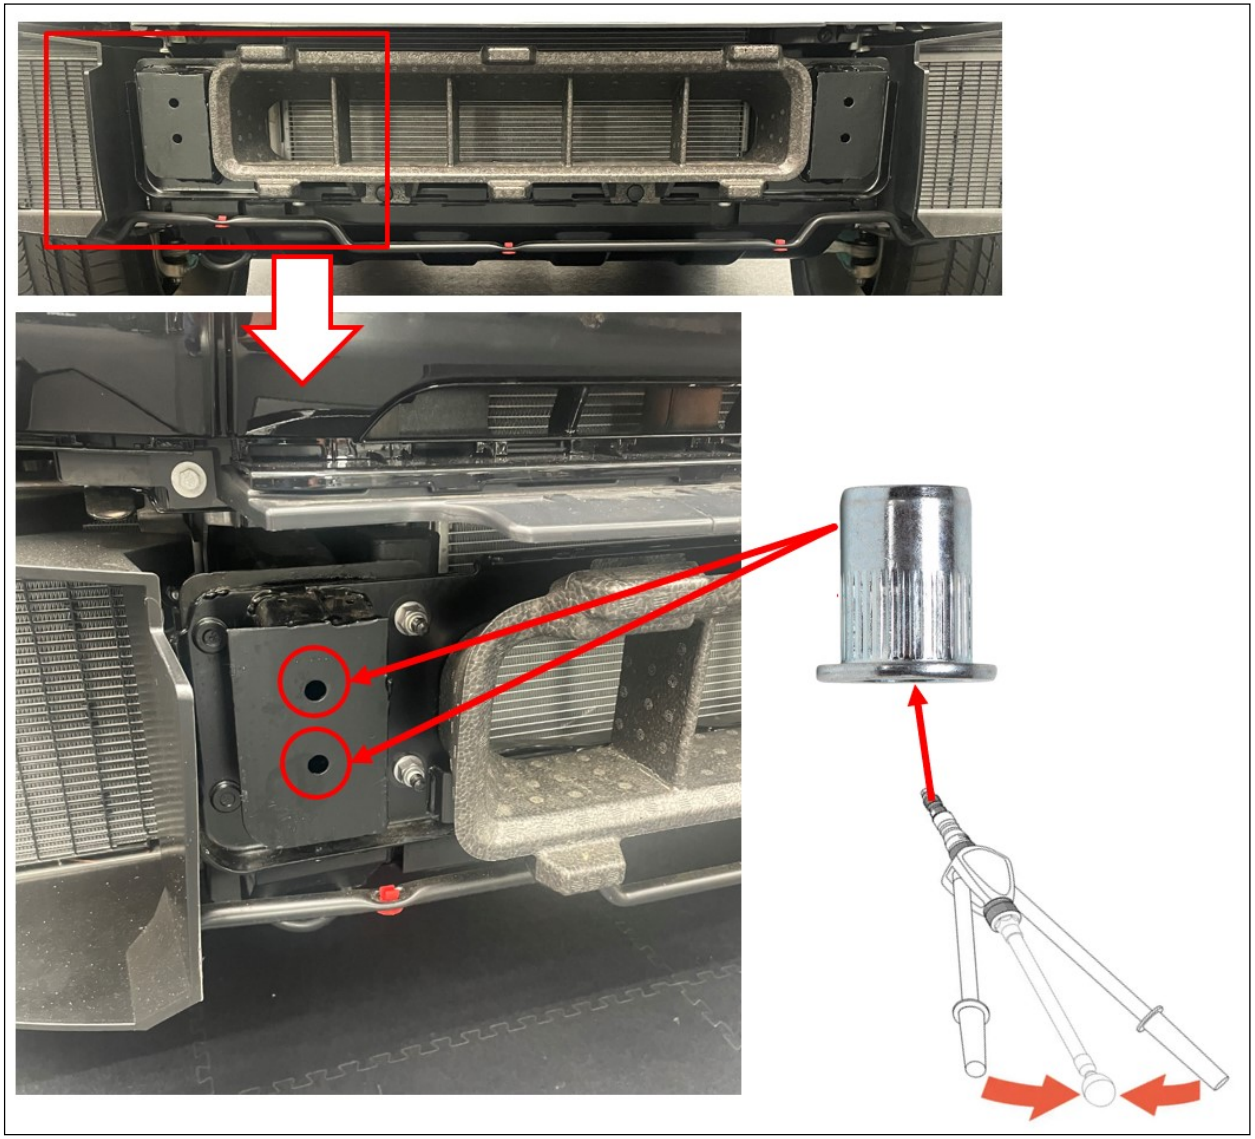

Official technology-partners KW Continental MOTUL YOKOHAMA ADVAN HANKOOK Member of VDM


- Fit the bracket set to the front crossbar as shown in the illustrations using the hexagon head screws (M10x40) supplied.

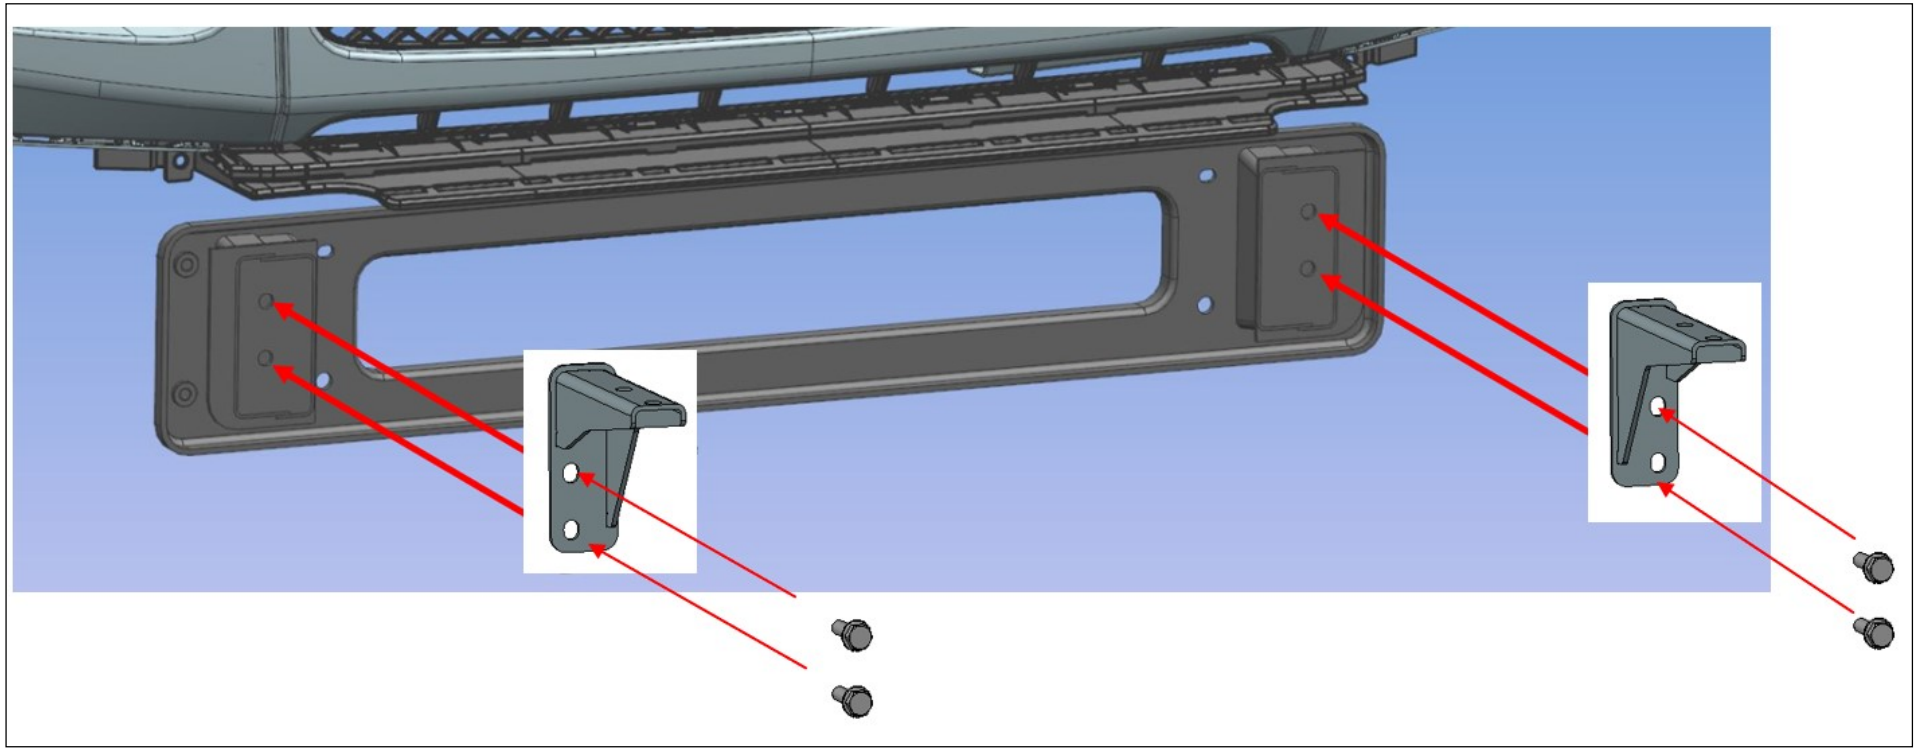

5


-
-
-

- Replace the center insert 465-234-202 on the Widestar front apron with the center insert 465-234-202-FSB, which is only intended for vehicles with a bull bar.

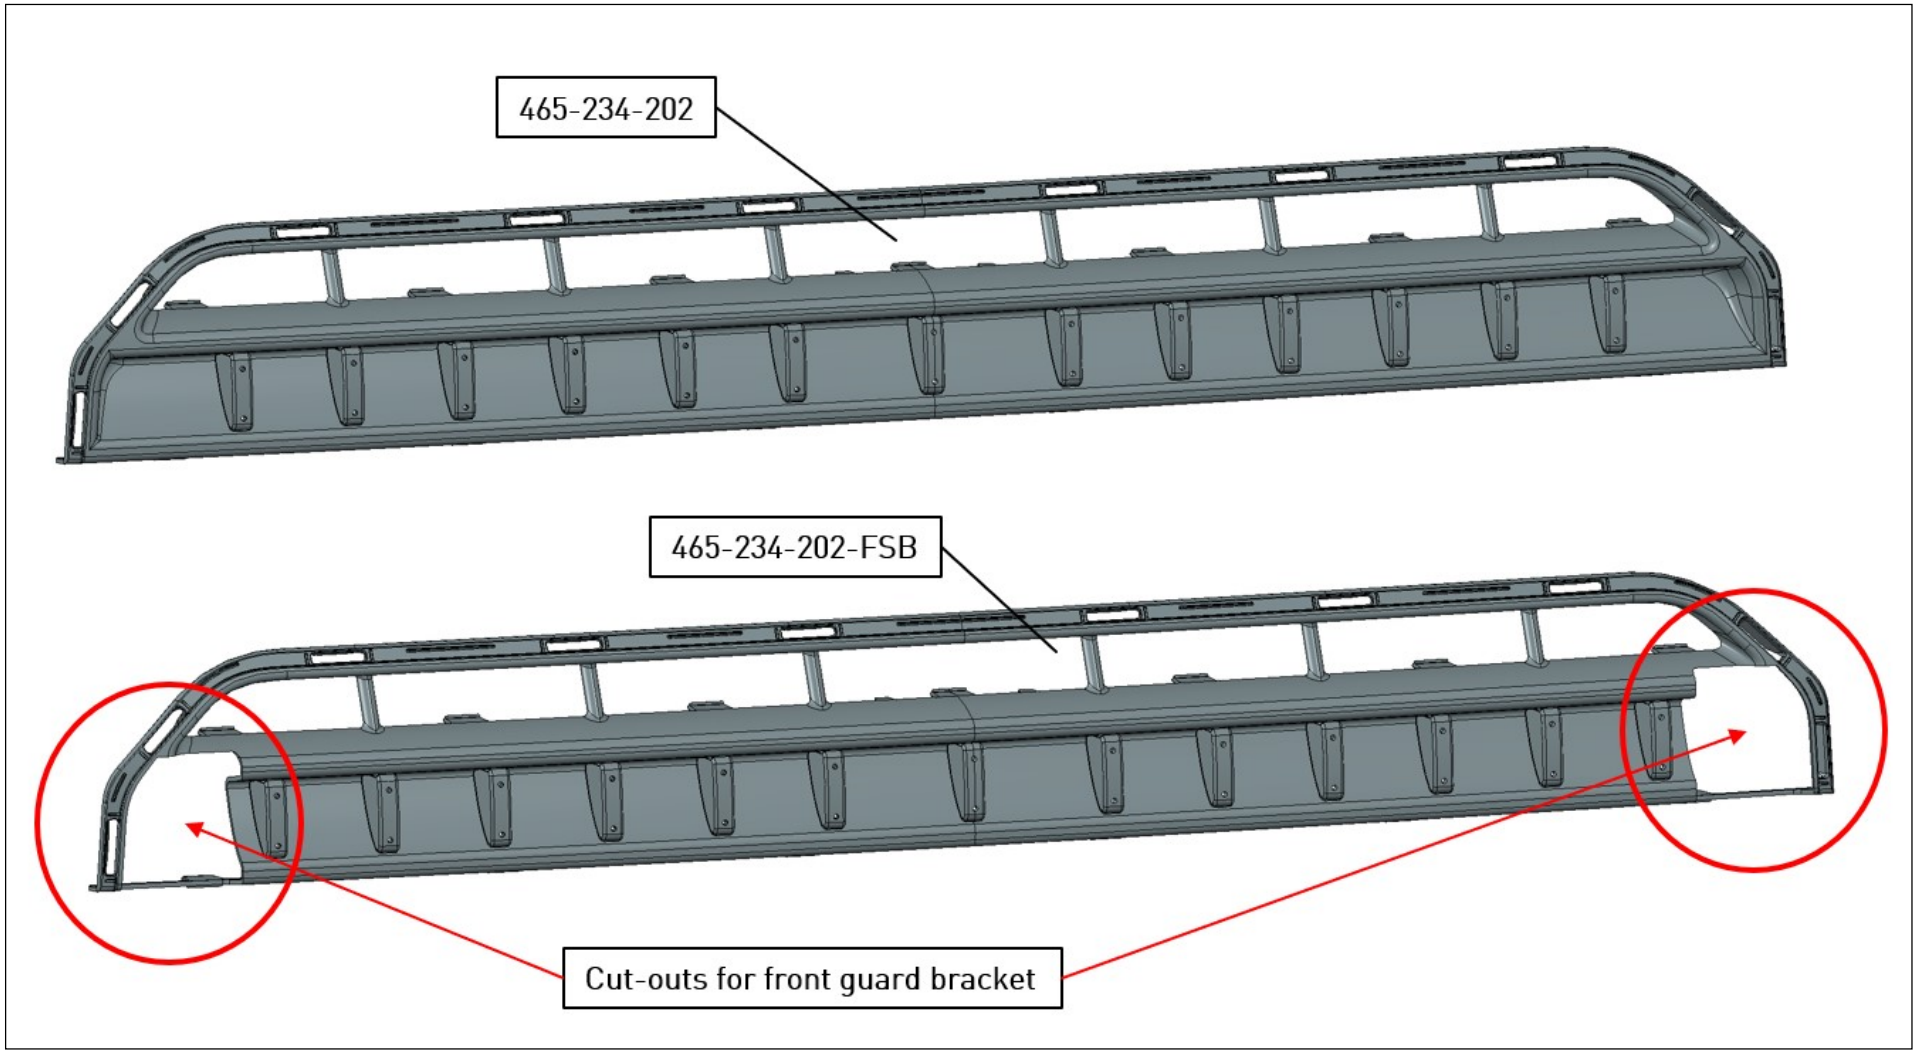


Official technology-partners Continental MOTUL YOKOHAMA ADVAN HANKOOK Member of VDN

- Fit the Widestar front apron to the vehicle. The holders for the front bar must protrude neatly through the cut-outs in the front apron.

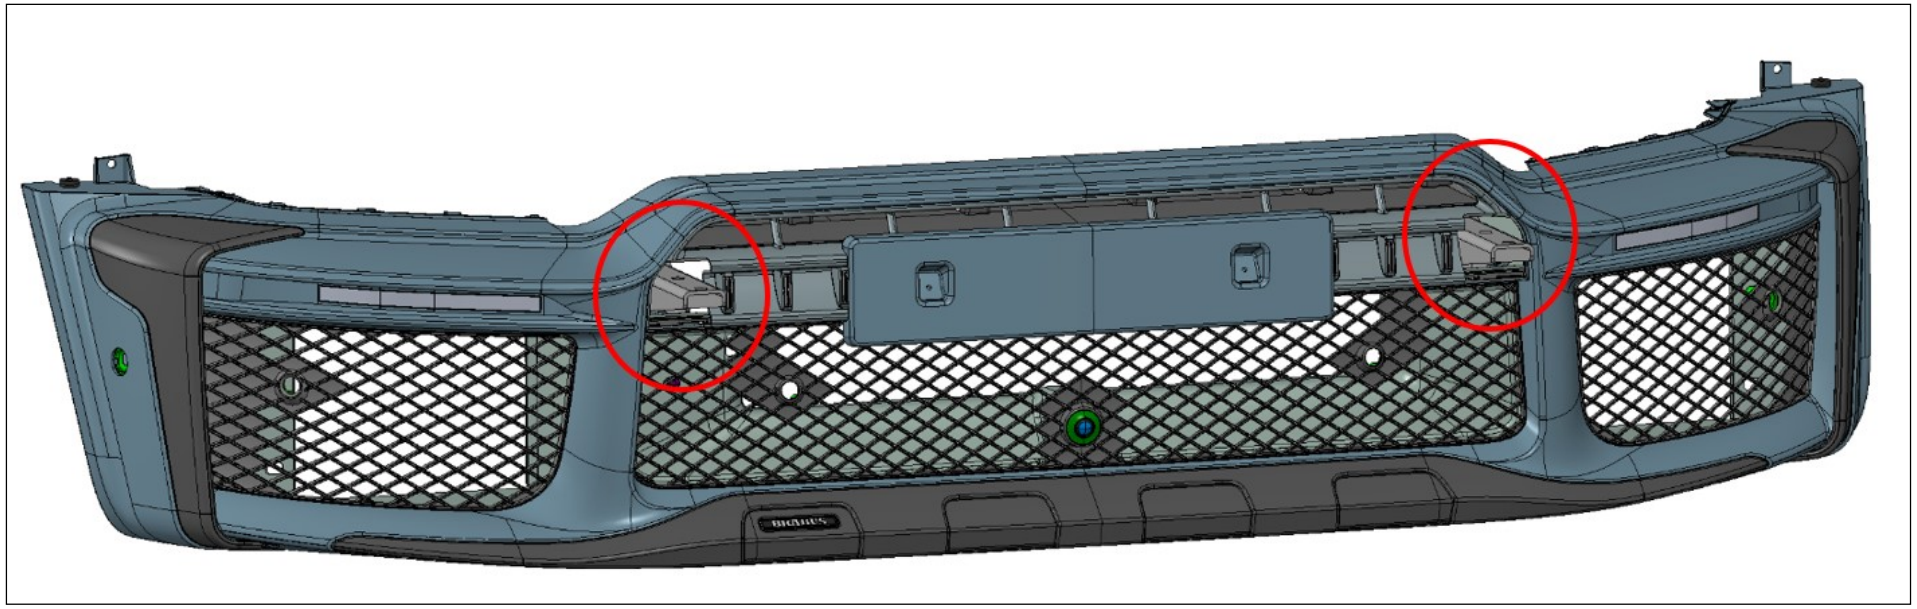


Official technology-partners Continental MOTUL YOKOHAMA ADVAN HANKOOK Member of VDN

- Attach the front bar to the brackets as shown in the illustration and screw it in place as shown in the illustrations below using the supplied fastening screws (4x hexagon head screw M8x25.

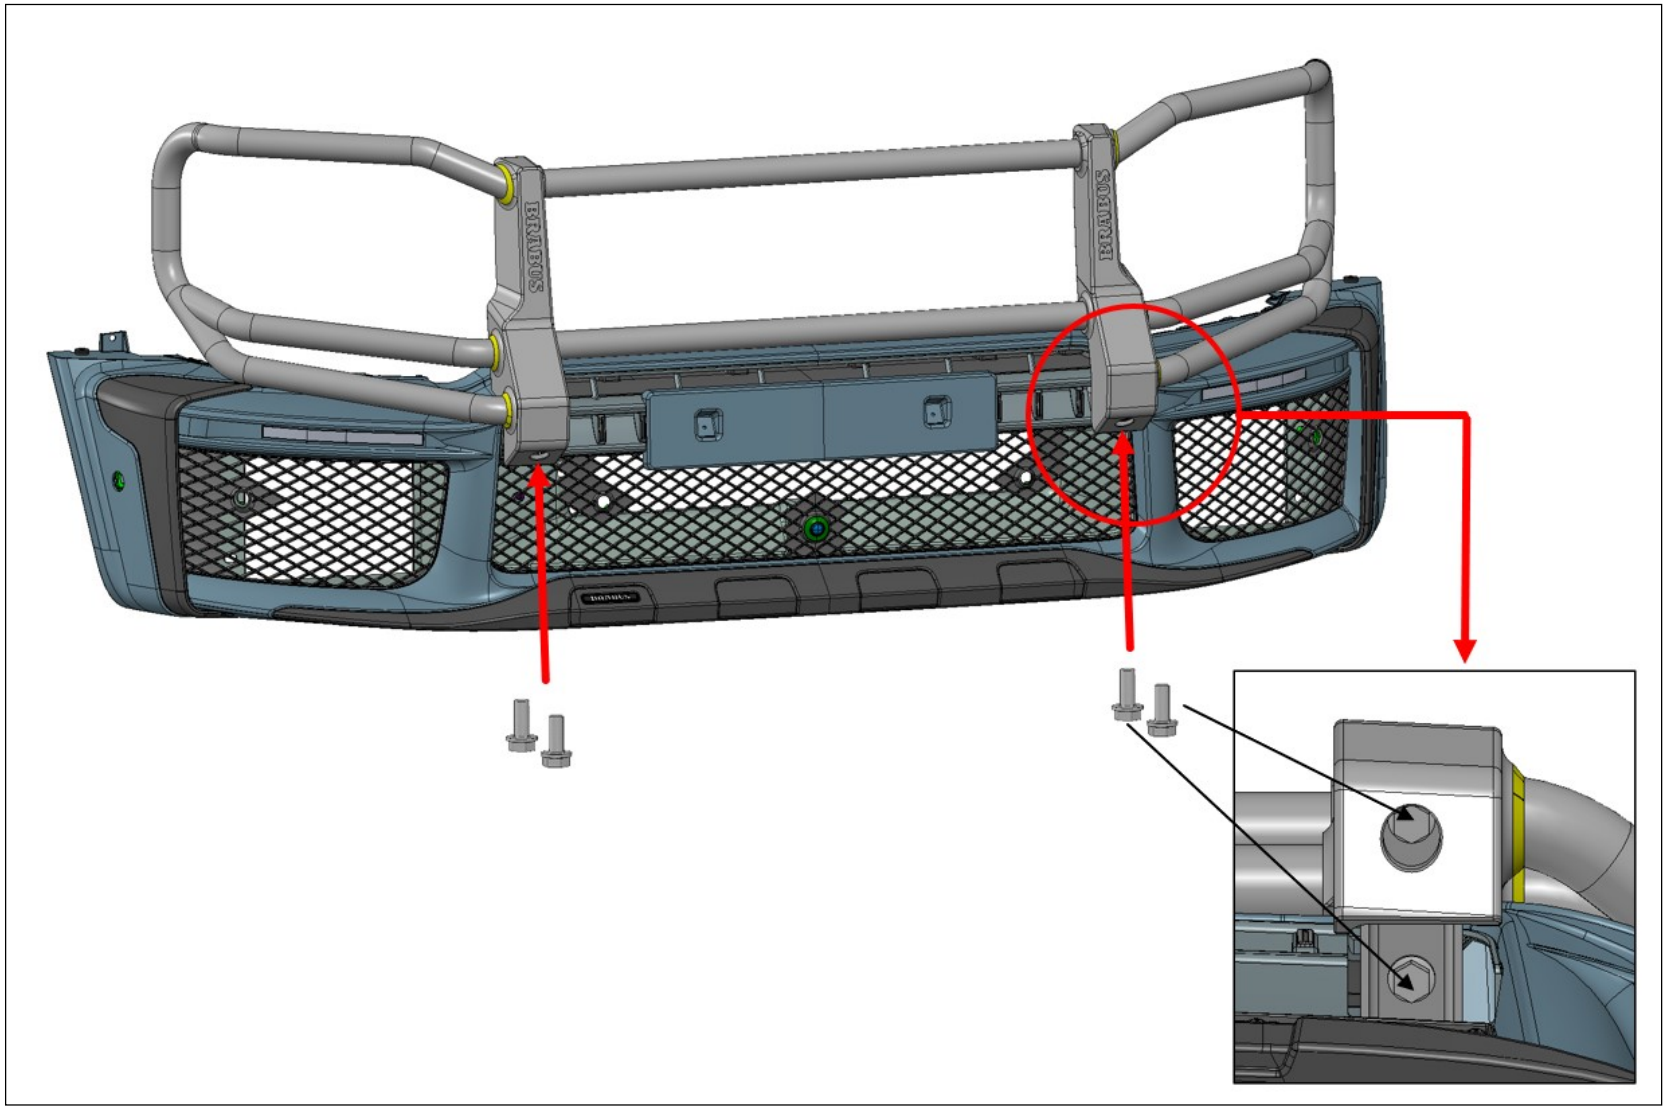

Official technology-partners Continental MOTUL YOKOHAMA HANKOOK Member of

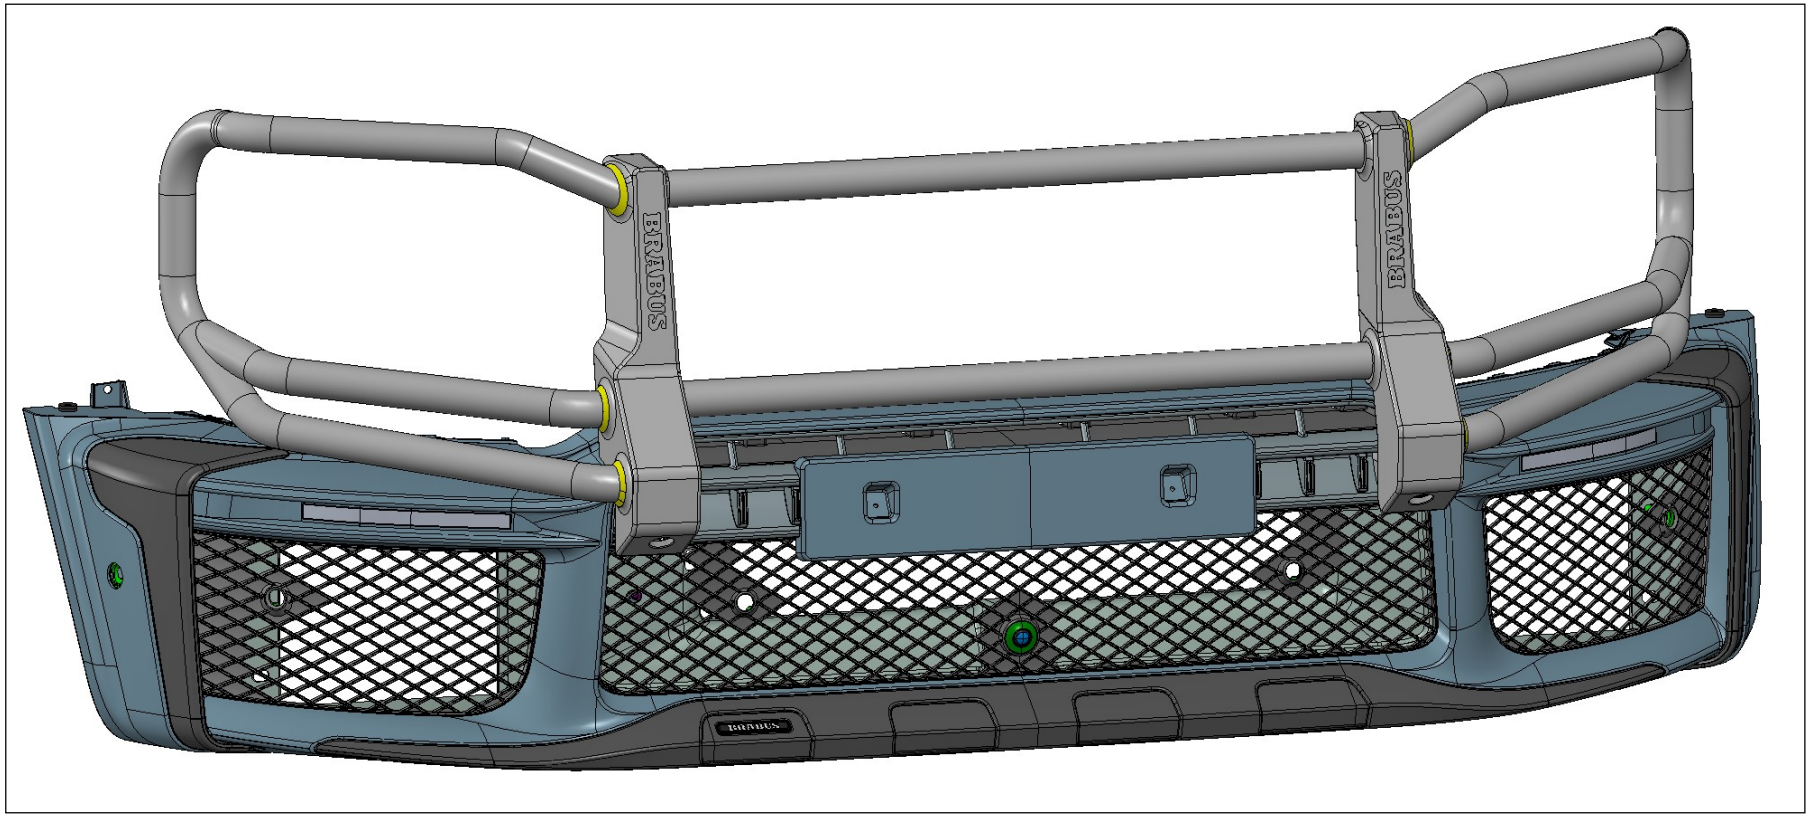

Official technology-partners KW Continental MOTUL YOKOHAMA ADVAN HANKOOK Member of VDN