Daytime running light black for W463 (after 11/2012)

463-TFL-00

BRABUS®

The product described in the instructions was developed, produced and checked considering the necessary safety requirements.
In order to ensure a proper and safe function and to rule out danger for persons and objects, this product must be installed appropriately.
Only trained, qualified staff, having the necessary technical experience and tools, should make the installation.
Therefore you have to read and completely understand these instructions.
Check the content of the parts supplied prior to assembly.

Included in delivery:


Quantity:	***Description:***	***Part no.:***
1x	Set of daytime running lights, black	000-TL-02-2
2x	Resistor	463-TFL-02

The daytime running lights do replace the standard lights the car is equipped with from the factory. Please connect the resisitors supplied to the plugs of the standard daytime running lights.


Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDAT

Assembly:

- Remove the standard headlamp frames.
- Remove the standard daytime running lights, attach the resistors supplied to the plugs of the standard daytime running lights.
- Bolt the resistors to the area shown within illustration below using screws M3.

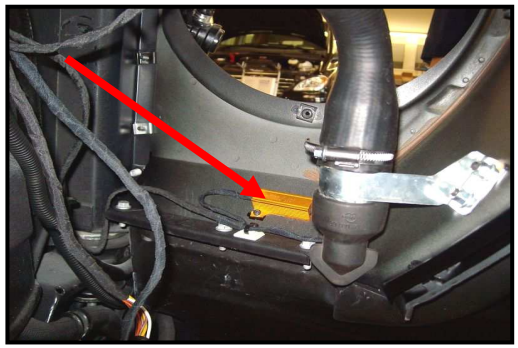


- Open the bonnet and remove the blower housing (A).

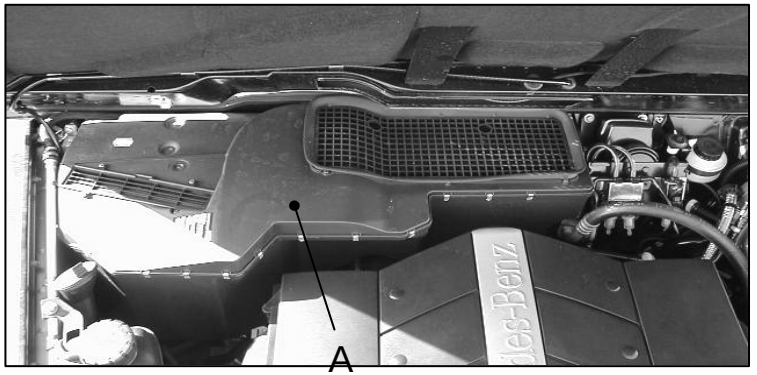

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDAT


- Loosen the right lower dashboard cover (below glovebox).


- Attach the daytime running light control unit on the passenger side according to figure (at standard assembly area shown).

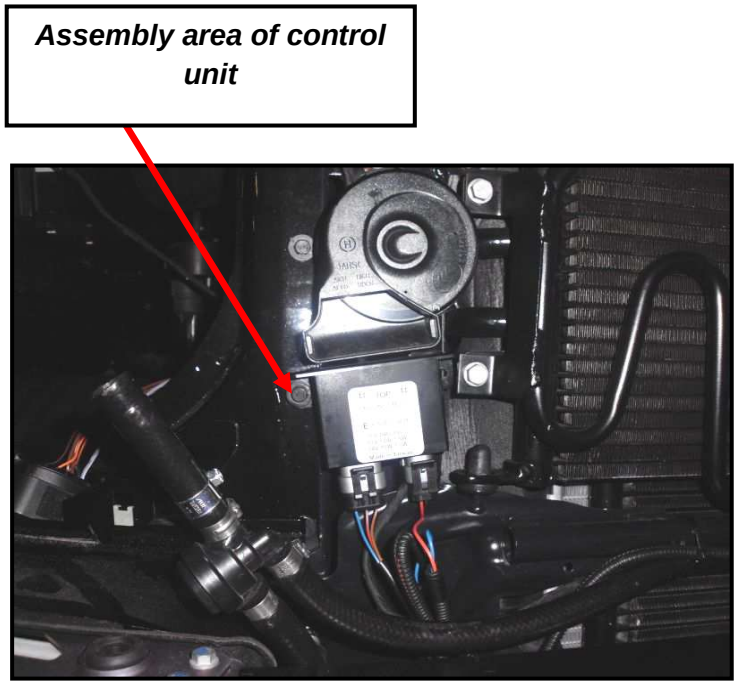


Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDAT

- Connect the wires of the wiring harness to the control unit.
- Route the wires for the daytime running lights to the left and right side (the longer one to the left side, fixate using cable ties according to fig.).
- Route the wires blue, red and blyck into the right wheelhouse.
- Solder the blue wire to the standard wire out of **PIN1** of the right headlamp plug. Isolate the soldered areas.
- Route the red and black wires into the engine bay.

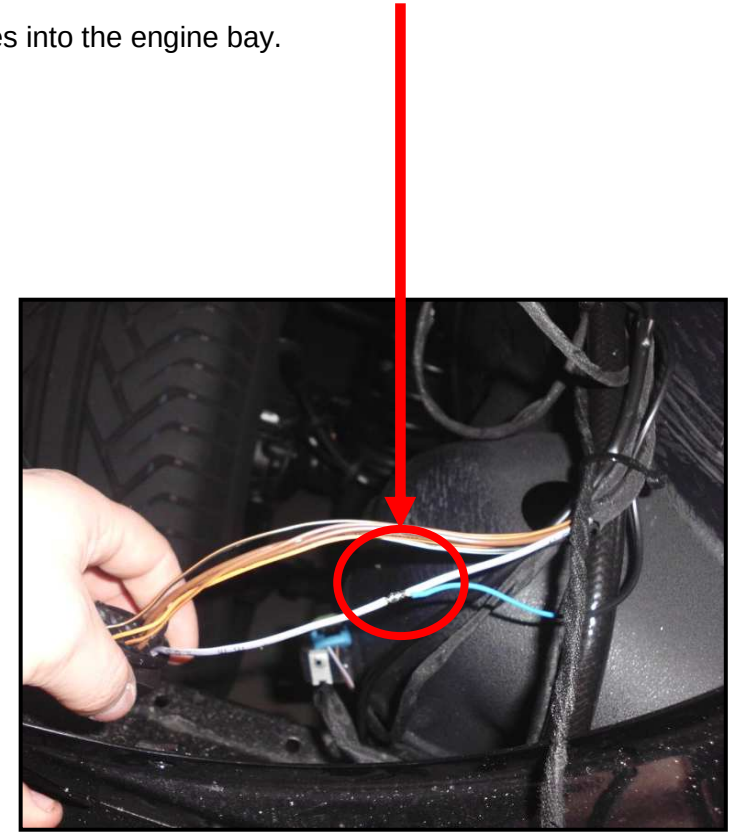

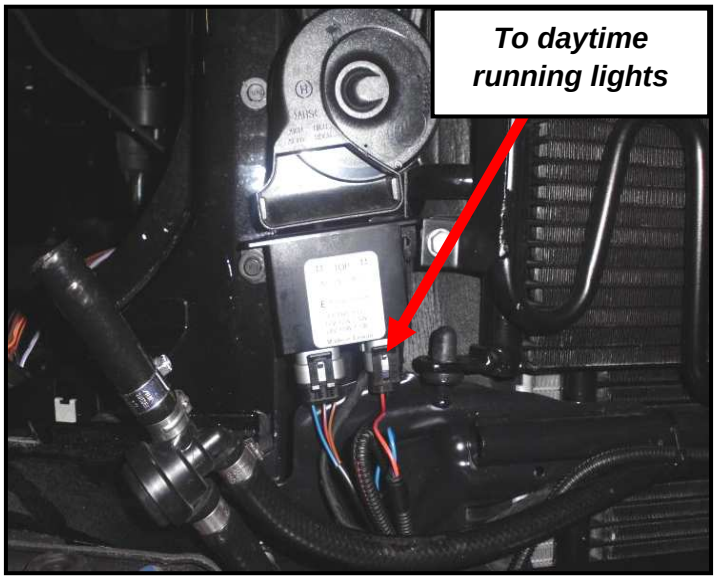

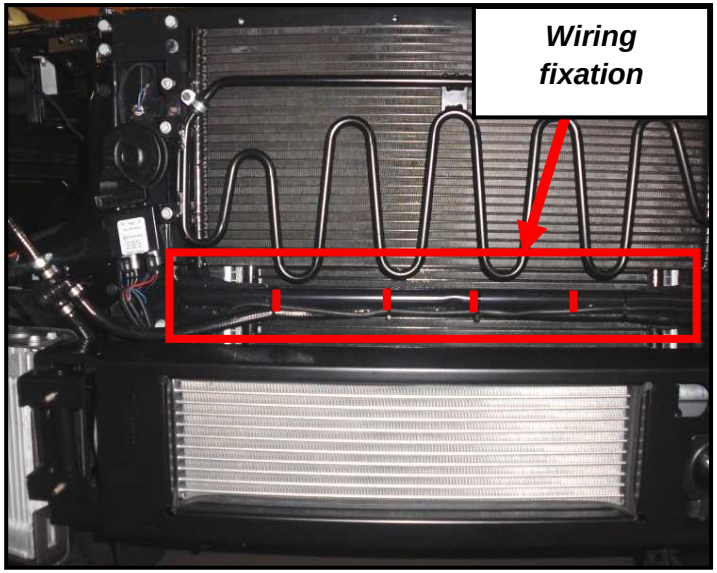

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDM

- Remove the cover shown and route the wires through the rubber grommet (cut carefully) into the car.





- Solder the red wire parallel to the red/green wire of the additional 12V plug within the lower dashboard cover.
- Solder the black wire parallel to the ground wire of the additional 12V plug within the lower dashboard cover.
- Sufficiently isolate the soldered areas.
- Bolt the daytime running lights to the standard headlamp frames same as the standard lights and attach the completed frames to the car.



- Re-attach all removed trim parts and perform a function check.

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDA