BRABUS®

The product described in the instructions was developed, produced and checked considering the necessary safety requirements.
In order to ensure a proper and safe function and to rule out danger for persons and objects, this product must be installed appropriately.
Only trained, qualified staff, having the necessary technical experience and tools, should make the installation.
Therefore you have to read and completely understand these instructions.
Check the content of the parts supplied prior to assembly.

Hints for adherence of body parts

The add on-parts for the car body can be bonded using the delivered adhesive, or using PU window adhesive in connection with appropriate primer .

When using the delivered adhesive all bonding areas (those of the car body and those of the add on parts) have to be sanded and properly cleaned and degreased.

We recommend to use Würth window-adhesive (e.g. Würth, window adhesive „Classic“ or „Pro“, article-nos.: WU89002310, WU89002330), in connection with acetone cleaner (e.g. Würth, article-no.: WU893460) and primer (e.g. Würth, article-No.: WU890024101).
The primer gets attached to the bonding areas of the car body and the add on parts by using special primer brushes (e.g. Würth, article-no.: WU891650). Attach the primer only in one direction. After the primer has flashed off, apply an even line of adhesive and bond the part to the car. Remove excessive adhesive using suitable cleaner (e.g. Würth, article-no.: WU89010063).

For fixation of the parts until the adhesive is completely hardened,
we recommend to use assembly brackets, (e.g. Würth, article-no.: WU069155210 )

Remove paint fog prior to painting!

Take care not to apply the primer to areas which are still visible after bonding, apply up to 5mm away from the markings!

Regard to bonding hints and make sure the bonding areas are clean, free of grease and free of paint.

Included in delivery:


1x Fender attachments 463-285-00_10

1x Adhesive kit

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDA

Assembly of fender attachments:

- Hold the fender attachments to the front fenders according to illustration below.
- Mark the position of the fender attachments to the fenders using a washable marker.

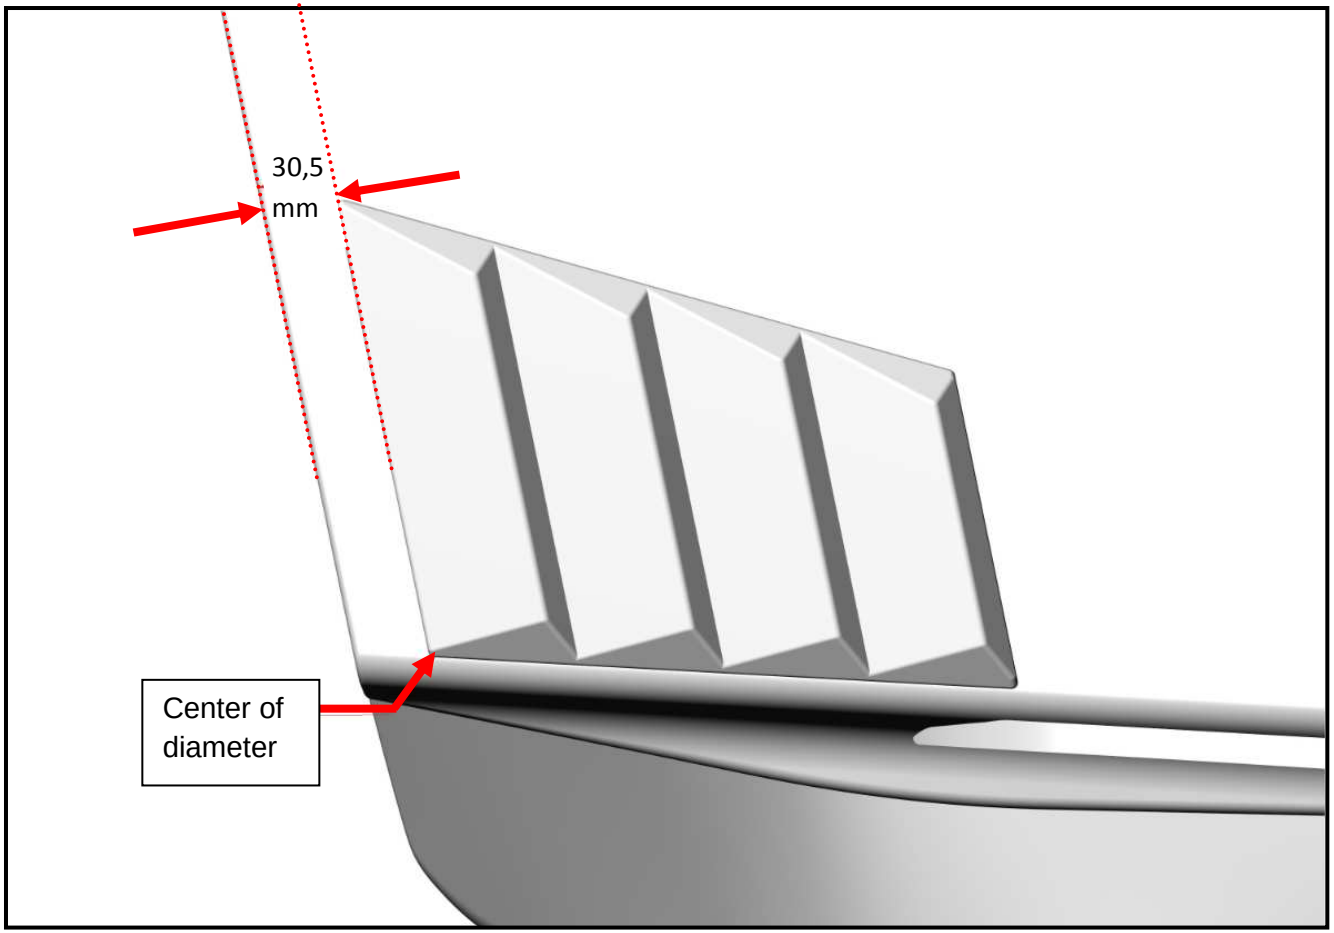

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDAT



- Prepare the bonding surfaces of the fenders and the bonding areas of the fender attachments according to bonding hints.
- Apply a thin and even line of adhesive to both, the bonding surfaces of the fenders and the bonding areas of the fender attachments.
- Fixate the fender attachments until the adhesive is finally hardened using appropriate adhesive tape.

Official technology-partners PIRELLI BILSTEIN Continental MOTUL YOKOHAMA ADVAN Member of VDA