




BRABUS®

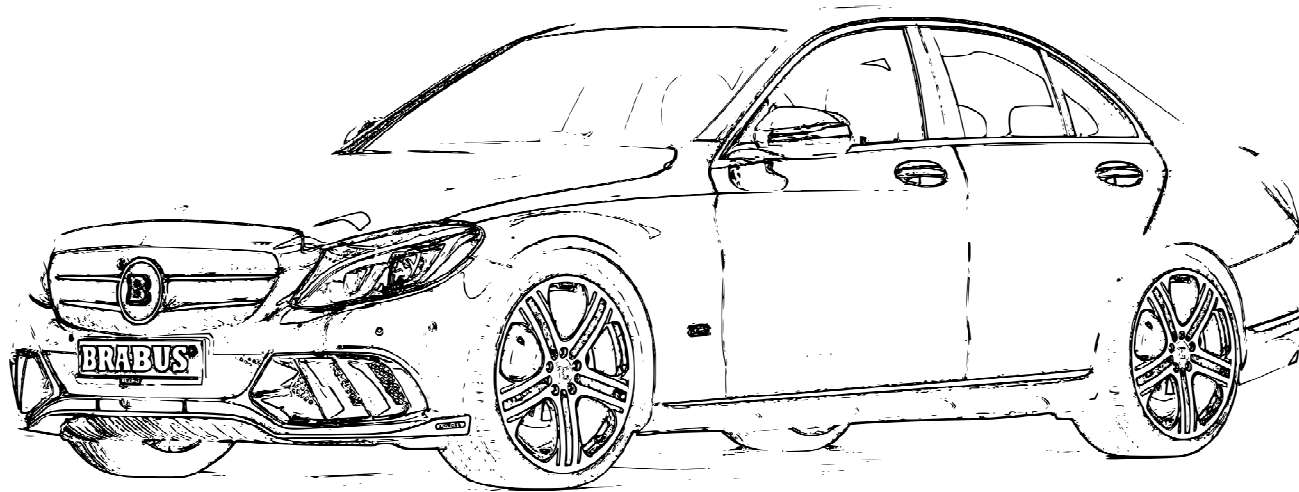

*The product described in the instructions was developed, produced and checked considering the necessary safety requirements.
In order to ensure a proper and safe function and to rule out danger for persons and objects, this product must be installed appropriately.
Only trained, qualified staff, having the necessary technical experience and tools, should make the installation.
Therefore you have to read and completely understand these instructions.
Check the content of the parts supplied prior to assembly.*

Lieferumfang BRABUS:

- 1x Rearbumper attachment 205-200-00
- 1x Trim grilles and assembly material

Assembly:

- Remove the standard Mercedes-Benz rear bumper according to Mercedes-Benz workshop instructions. Remove the rearbumper insert and the PDC sensors. Also remove the standard exhaust tailpipes and their brackets.



- Attach the PDC-sensors to the Brabus rearbumper attachment.
- Bolt the trim grilles to the rearbumper attachment using screws supplied.

- Attach the Brabus rear bumper insert to the standard assembly areas of the rearbumper and to the inlay. Make sure the latches have securely been attached.



- Connect the wiring harness to the PDC sensors.
- Re-assemble the rearbumper.